


mistral

Tower Fan MFD310

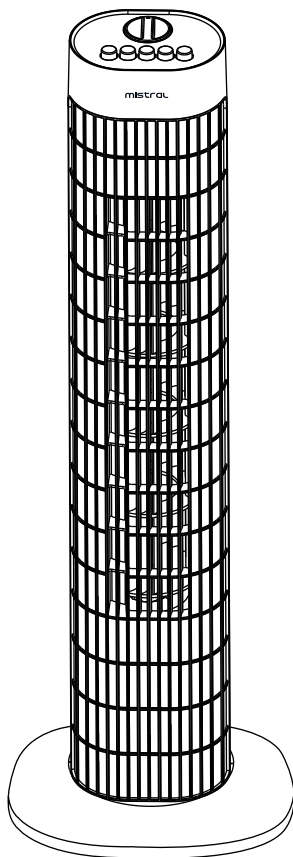

TOWER FAN

Please read this instruction manual thoroughly before operating and keep it for future reference

IMPORTANT SAFETY INSTRUCTIONS

Warning

- This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge unless they have been given supervision or instruction by a person responsible for their safety. Children should be supervised at all times while in use.
 - Do not use the appliance if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped or damaged in any way. If the power cord is damaged, it should be replaced by the Service Centre to avoid any hazards.
- Always follow basic safety precautions when using electrical appliances to reduce the risk of
- fire, electric shock, and/or injury.
 - Do not immerse the appliance, power cord, or power plug in water or any other liquid.
 - Always unplug the appliance from the outlet when not in use and before cleaning.
 - Never unplug the appliance by pulling on the cord.
 - Only use accessories that come with the appliance, as other accessories may cause fire, electric shock, or injury.

Tower Fan Safety Instructions

- It is recommended to switch off the fan, and allow the motor to rest for at least 1 hour after 15 hours of use.
- For your own safety, please clean your fan regularly. Accumulation of dust/ pet dander etc. may lead to motor failure or pose a fire hazard.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Indoor and household use only.
- When the fan was assembled, the rotor blade guard shall not be taken off anymore.
 - Before cleaning unplug the fan.
 - The rotor guard shall not be disassembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.
- Never insert fingers, pencils, or any other object through the grille when the fan is running.
- Disconnect fan when moving from one location to another.
- Be sure the fan is on a stable surface when operating to avoid overturning.
- Do not use the fan near the window, rain may create an electrical hazard.
- Do not use the fan near or in wet or damp locations. Never place the FAN where it may fall into a bathtub or other water container.
- Avoid using extension cord as the extension cord may overheat and cause a risk of fire.


Warning:

- The Main Power Switch and the On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.

PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	AIR VOLUME	MAX AIR FLOW
MFD310	220-240V~ 50-60Hz	40W	10 m ³ /min	6.4 m/sec

INTRODUCTION OF PARTS

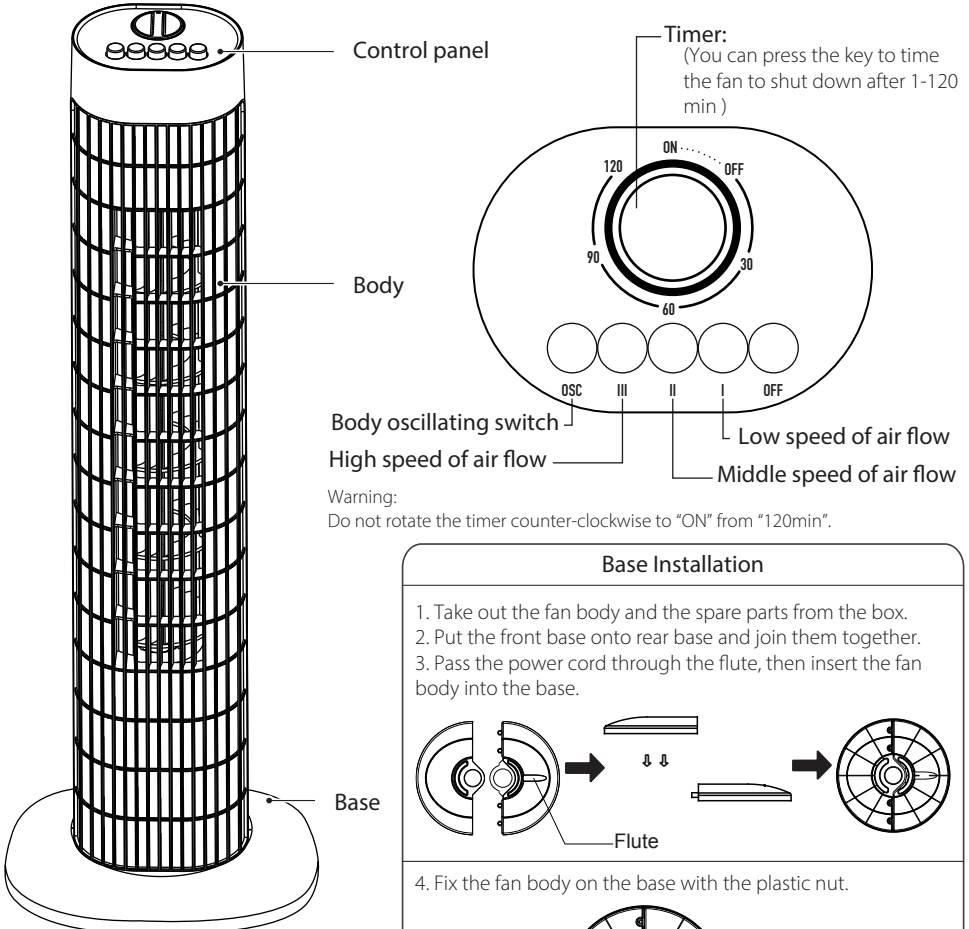

Base Installation

1. Take out the fan body and the spare parts from the box.
2. Put the front base onto rear base and join them together.
3. Pass the power cord through the flute, then insert the fan body into the base.

Flute

4. Fix the fan body on the base with the plastic nut.

Note: All the pictures in this manual are for explanation purpose only.
Any discrepancy between the real object and the illustration in the drawing shall be subject to the real subject.

CLEANING AND MAINTENANCE

The tower fan requires minimal maintenance. Do not try to fix it by yourself.

- Before cleaning and assembling, do not plug the power cord into the socket.
- To ensure that there is adequate air circulation to the motor keep vents at the rear of the motor housing from dust, fluff, etc.
- Do not be used a vacuum cleaner to clean these vents before unplug.
- Do not disassemble the fan to remove fluff.
- Please wipe the exterior parts with a soft cloth which is soaked in mild detergent.
- Do not use any abrasive detergent or solvents to which may scratch the surface.
- Do not use any of followings as cleaning agent: gasoline, thinner, bending.
- Do not allow water or any other liquid into motor housing or interior parts.

Cleaning

- Be sure to unplug the fan from the electrical supply mains before cleaning.
- Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at www.mayer.sg

MAYER MARKETING PTE LTD

Customer Service Hotline: 6542-8383 (Mon - Fri 9:00am to 5:00 pm)

Service Centre Operating Hours:

Mon - Fri: 9:00am to 5:00pm

Sat: 9:00am to 12:00pm

Closed on Sunday & Public Holidays

71 Ubi Crescent, #06-02, Excalibur Centre, Singapore 408571.