 


mistral

8" BLDC High Velocity Desk Fan with Remote MHV880R-GW

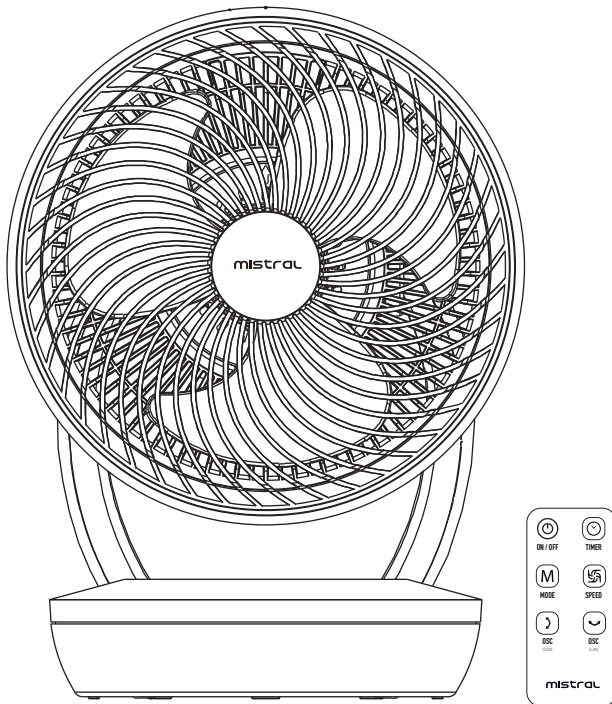

TABLE/ DESK FAN

Please read this instruction manual thoroughly
before operating and keep it for future reference

Product design, features and specifications are correct at time of
printing but are subject to change without prior notice.


IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. If the power cord is damaged, it must be replaced by the Service Centre to avoid a hazard.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug from the outlet when not in use and before cleaning.
- Do not unplug the appliance by pulling on the cord.
- Use the accessories from the appliance only, as other accessories not from the appliance may cause fire, electric shock or injury.
- The appliance must stand upright, it should have a distance of 30 cm from other objects, or any items would stop the oscillation of the appliance. Make sure there are no curtains, table cloths, clothing, curtains, hair, etc. near the appliance. They could be sucked into the opening of the fan, which can lead to damage or injury.
- Do not insert your fingers, pencils, or any other objects into the appliance.
- Do not use the appliance outdoors, or in any place where it can be splashed with oil, water, or any substances.
- Do not expose the appliance to direct sunlight.
- Please ensure that the appliance is switched off before any maintenance and before removing the guard.
- Unplug the plug outlet when moving, not in use, and before cleaning.
- Do not let the appliance touch any hot surfaces.
- Do not operate the fan in the presence of explosive and/or flammable fumes.
- Do not cover the appliance or near flammable or explosive gases to avoid any fire hazard.
- Please make sure that the appliance must be upright at all times, and do not leave it facing down or lying by the side.
- Do not spray any detergent including bug or mosquito killer into the appliance to prevent damage to the material.
- The appliance is for household use only. Do not use outdoors or for any commercial or industrial purpose.

PRODUCT TECHNICAL PARAMETERS


MODEL	RATED VOLTAGE	RATED POWER	AIR VOLUME	MAX AIR FLOW
MHV880R-GW	100-240V, 50-60Hz	25W	31.7 m³/min	8 m/sec

INTRODUCTION OF PARTS

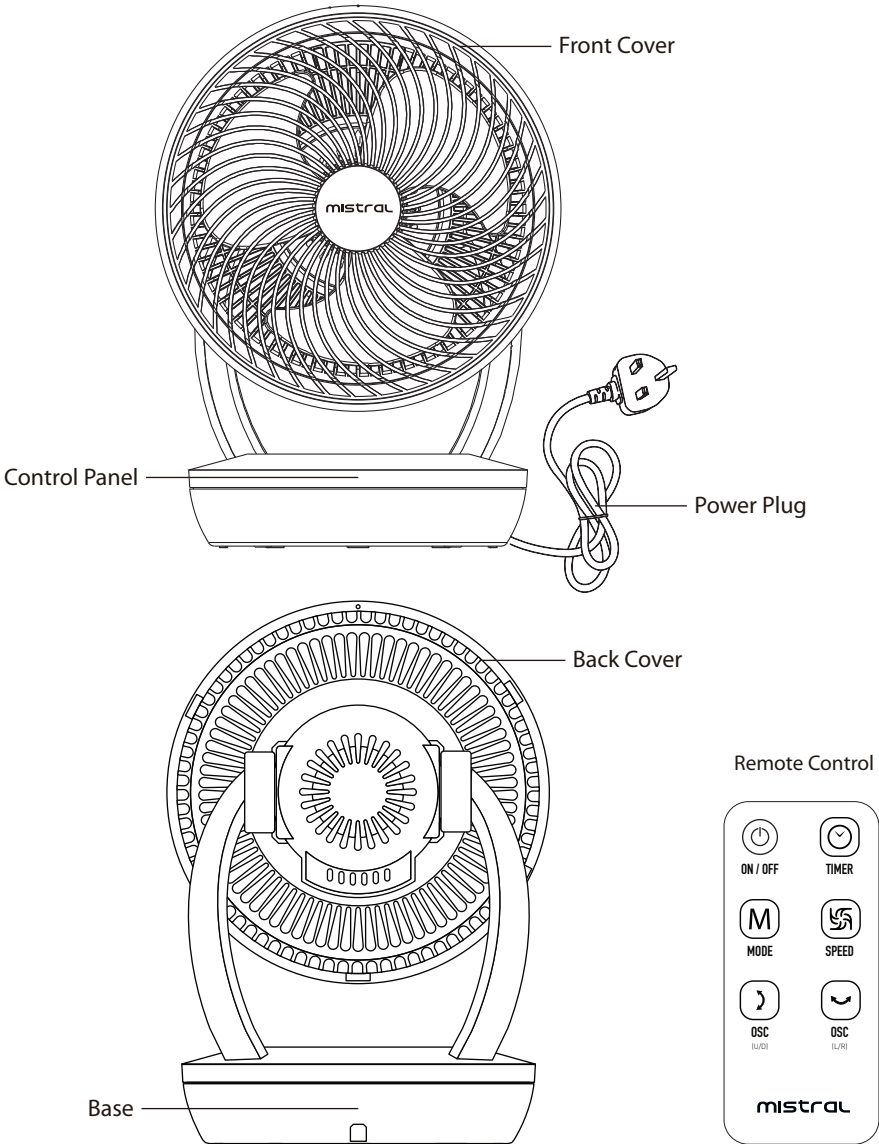

CONTROLS AND OPERATIONS

 Control Panel

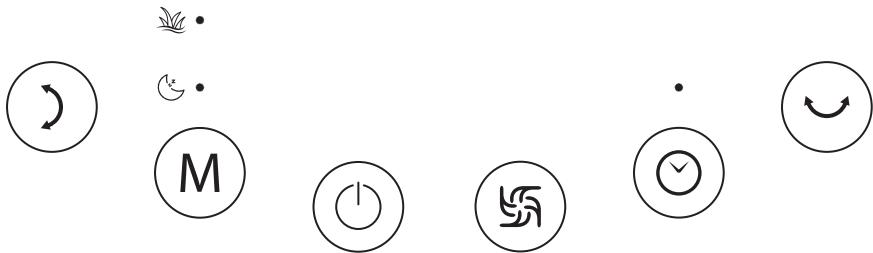

How to use

Power

- Plug in the appliance and it will beep, and the LED will display the current room temperature, press the power button "" to start the appliance at low speed.

Speed

- Press the speed button "" to cycle through the 8 speeds. After selecting a speed, the speed number will display on the window.

Mode

- Press the mode button "" to switch between ECO or Sleep mode, the LED indicator will light up to the corresponding mode.

Timer

- Press the timer button "" to set the timer between 1 - 8 hours. When selecting the number of hours the LED display window will show the number of hours and after selection, the indicator light will light up.

Oscillation

- Press the oscillation button "" to adjust left and right.
- Press the oscillation button "" to adjust up and down.

Lighting

- When the appliance is switched on, in 15s, the light indicator lowers to 50% brightness.
- When the appliance is switched on, in 30s, the light indicator will be off.


Remote control

- To ensure proper operation, aim the remote control at the signal receiver on the appliance.

Operating the appliance


- Please place this appliance on a smooth and flat solid surface, without obstacles obstructing.

Fan with Air conditioner

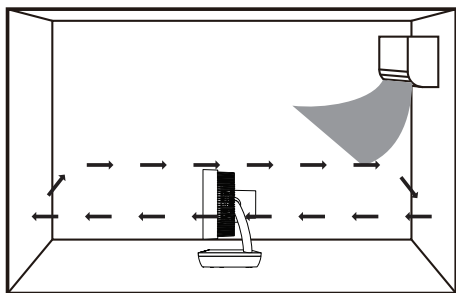


Place the fan with the back facing the air conditioner to circulate cool air around the room.

Fan with Heater

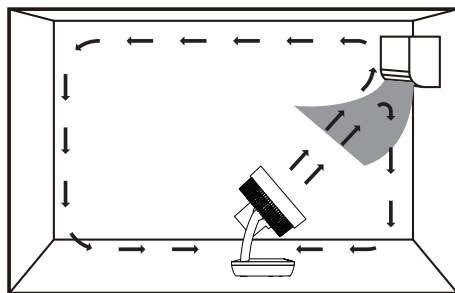


Place the fan with the front facing the heater to circulate warm air around the room.

Indoor air circulation

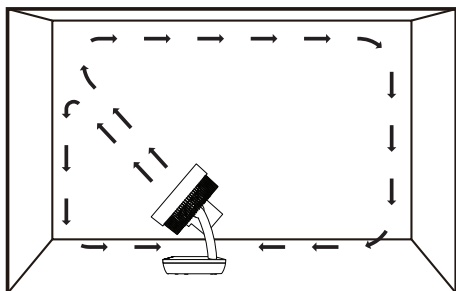


Place the fan in an angle to help circulate the air in whole room.

Ventilation

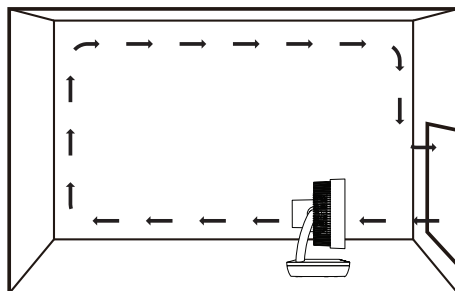


Place the fan towards the window to circulate and exhaust the air in the room.

Air circulation for two rooms

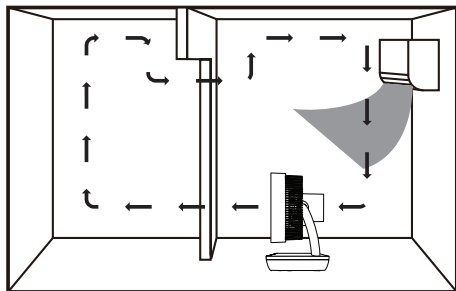

Place the fan facing toward to another room to circulate air between the two room.

Dry clothes

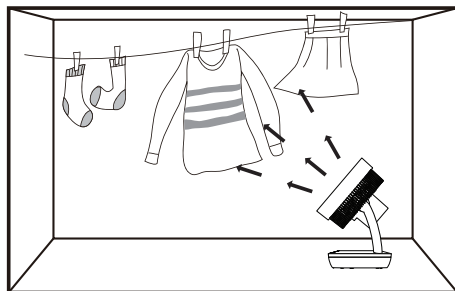

Place the fan angled towards the clothings to help dry the clothes faster.

CLEANING AND MAINTENANCE

Cleaning


- Before cleaning, please ensure the fan is switched off and unplugged from the main supply.
- Use only a soft, damp cloth (not wet) to wipe the exterior of the fan to remove dust and dirt.
- Use a vacuum cleaner to remove dust and fluff from around the fan guards.
- DO NOT use gasoline, paint thinner or other chemicals to clean the fan.
- Do not attempt to dismantle the fan. There are no user serviceable parts.
- If the fan is not in use, it must be switched off and disconnected from the power.
- It's better to use original packing and put it in a cool, dry, dust free storage.

Disassemble

1. Use a "+" shape screwdriver to unscrew the two screws at the screw hole for the front guard to be removed. The screw hole can be found on the back guard within the handle.
2. After removing the screws, slightly turn the front guard anti-clockwise until the 2nd marking on the left of the first marking. You will feel the catch has been released. (refer to image below)
3. Pull the front guard out and remove it.
4. Unscrew the nut for the fan blade clockwise to loosen and remove the nut. Or hold the nut and anticlockwise turn the blade until the nut becomes loose. Then turn the nut out and pull out the blade.
5. After cleaning the front guard and fan blade, ensure that they are thoroughly dried before putting and assembling them back into the fan.

Note

- The rear guard can be removed for easy cleaning. Clean the rear guard with a soft cloth or rinse with clean water. Dry thoroughly before reassembling the fan.
- Always ensure the fan is fully assembled and securely locked in place before switching on the appliance.

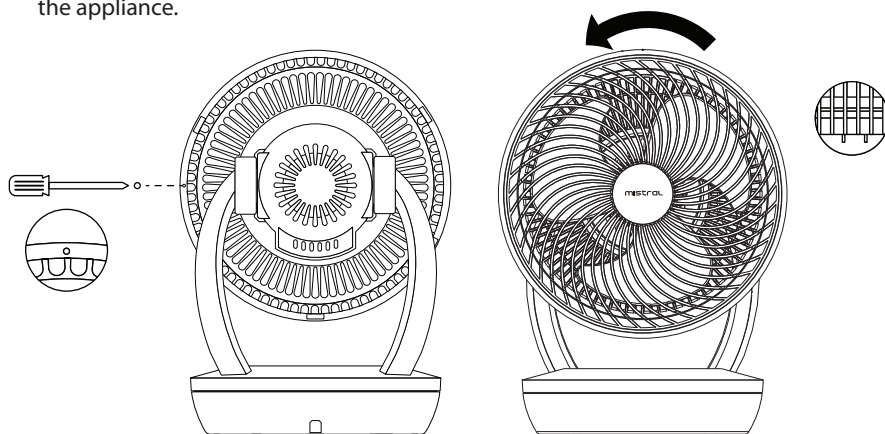

TROUBLESHOOTING

Problem	Cause of Issue	Solution
After using the fan for a period of time, the wind speed of the fan becomes weaker and the noise gets louder.	The dust may have accumulated in the fan blades and on the front guard.	Please disassemble and clean the fan blades and the front guard.
There are abnormal sounds when the fan is oscillating.	When the new fan works for the first time, the bearings may have a little noise.	Please disassemble and clean the fan blades and the front guard.
	When the fan is adjusting its direction automatically, it may make a sound due to a short pause (reversing inertia).	
The fan does not work.	The power plug is not properly inserted into the socket.	Reconnect the power plug and be sure it's properly plugged into the socket.
		Please contact the Service Centre for repairs.
The fan produces abnormal noises when powered on and running.	The fan is placed on an uneven ground.	Place the fan on a flat and steady platform.
	The front cover or the fan blade is not installed correctly.	Please make sure all the parts are installed properly and correctly.
The fan blades are operating abnormally.	The dust may have accumulated in the fan blades and on the front guard.	Please disassemble and clean the fan blades and the front guard.



Disposal

This product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicates such disposal procedures. The materials are recyclable in accordance with their respective symbols. By means of re-use, material recycling or any other form of recycling old appliances, you are making an important contribution to the protection of our environment.



Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at <https://www.mayer.sg>

MAYER MARKETING PTE LTD

Customer Service Hotline: 6542-8383 (Mon - Fri 9:00am to 5:00 pm)

Service Centre Operating Hours:

Mon - Fri: 9:00am to 5:00pm

Sat: 9:00am to 12:00pm

Closed on Sunday & Public Holidays

71 Ubi Crescent, #06-02, Excalibur Centre, Singapore 408571.