


Electric Cooker with Ceramic Pot MMECP06

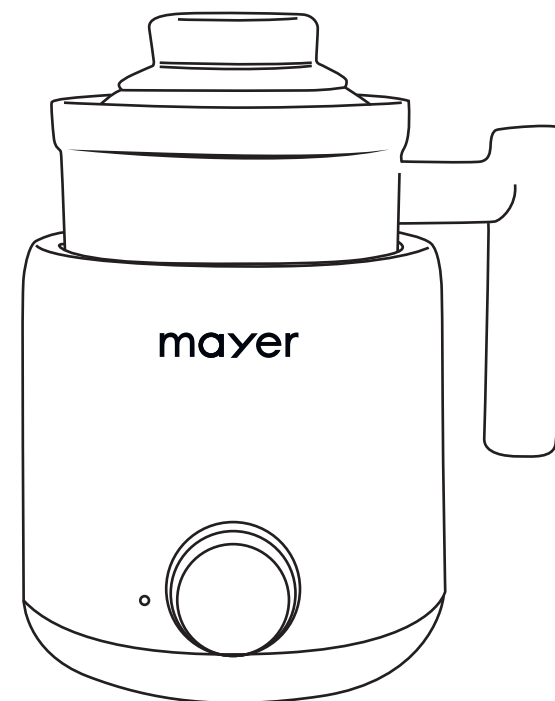

Please read this instruction manual thoroughly before operating and keep it for future reference

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at <https://www.mayer.sg>

MAYER MARKETING PTE LTD

Customer Service Hotline: 6542-8383 (Mon - Fri 9:00am to 5:00 pm)

Service Centre Operating Hours:

Mon, Wed & Fri: 9:00am to 6:00pm

Tue & Thurs: 9:00am to 8:00pm

Sat: 9:00am to 3:00pm

Closed on Sunday & Public Holidays

71 Ubi Crescent, #06-02, Excalibur Centre, Singapore 408571.

Download Mayer App via



IMPORTANT SAFETY INSTRUCTIONS

1. Please use ac power supply with the same voltage as marked on the nameplate.
2. Please use a power source with qualified grounding protection to ensure personal safety.
3. Do not use the product near or on the surface of inflammable or explosive objects; do not use it in an environment where it is damp or close to other heat sources, in order to avoid failure and danger.
4. The product should be placed on a stable platform out of the reach of children.
5. Steam will come out when the product is working, so please do not put your face or hands near the steam vent to avoid scald; do not place objects that are vulnerable to steam above this product; do not cover the steam vent with cloth or similar items to avoid accidents or malfunctions.
6. As the temperature of ceramic cup and top cover rises gradually when the product is working, please do not touch them. The machine body shell and the inner surface of aluminum pot are very hot after finishing working, please do not touch or contact them with hands or body to avoid scald.
7. This ceramic cup can be heated only in this product; do not put the ceramic cup directly on the open fire or on other stove to heat. Avoid the ceramic cup and top cover in contact with cold water when they are hot, so as not to burst.
8. When there is no food for stewing in the ceramic cup, do not power on the product for dry burning. Unplug the power plug when the product is not in use.
9. In case of dry burning due to water shortage, please unplug the power line immediately and make the product cool naturally, and in the cooling process, do not add water into the ceramic cup or remove the ceramic cup from the pot body, or the ceramic cup may be damaged;
10. Always keep the power plug and socket dry. Do not insert and unplug the power plug with wet hands to prevent electric shock.
11. Do not move the product when it is powered on.
12. In working state, press the "Power / Cancel" button, the product will return to the standby mode and the display screen will display "0.0".
13. In case of power failure halfway, the product will return to the standby mode, and only after it is reset, can the product continue to work.
14. When the product is used at the first time, the heating element will give off slight odor; moreover, the display screen might flash when it is just electrified, then please unplug the plug and electrify it again; these two phenomena are normal. Please use with care.
15. The ceramic cup and top cover are fragile and shall be prevented from collision with hard objects and falling from a high place so as to avoid being broken and damaged.
16. When stewing food or cooking porridge, the proportion of food to water should not be too high; otherwise, the food will be boiled dry and burnt easily, and the service life of the ceramic cup will be affected in serious case.

TROUBLESHOOTING

Fault phenomenon	Fault reason	Elimination method
Power-down	The power cord plug is not plugged in properly	Check that the power cord plug is properly plugged in
	The socket does not have power supply	Check whether the socket has power supply
Not heated	The heating element is damaged	Send the product to the designated repair outlet for maintenance or contact us
	Other failure of product	

1. This product shall not be dismantled and repaired by non-professionals.
2. If the power cord is damaged, it must be replaced with a new one by the professionals of the Company, the Repair Department or similar department to avoid danger.
3. If the product fails and cannot be repaired, please do not repair it by yourself. Please contact our local franchised repair outlet or our Customer Service Department for solution.
4. The ceramic cup and top cover are fragile and are not within the scope of warranty. Please use with care.

CLEANING AND MAINTENANCE

Cleaning method:

1. Before cleaning the product, the power line should be removed, and all parts should be cooled.
2. Do not immerse the power line and the main body into water or rinse them, so as to avoid the water from getting in the electric appliance, causing failure and affecting safe use of the product.
3. Wet towel can be used to wipe the product when it is dirty; do not use corrosive liquid in cleaning.
4. The ceramic cup and top cover can be cleaned with detergent and sponge; do not use hard steel wool to clean, in order to avoid damage to the surface.

Storage method:

5. When the product is not used for a long time, please clean it and put it in the packing box. It should be stored in a dry and ventilated place to protect it from moisture and avoid affecting the use.


PRODUCT FEATURES

- Fashionable appearance, exquisite craftsmanship.
- With one-piece handle, the ceramic cup can be used as a container or a vessel, and it is beautiful and practical.
- 0.6L one-person capacity, large-caliber cup body, convenient to clean.
- Multiple gears such as stewing, slow braising and keeping warm can be selected, so as to meet the different cooking requirements.
- Plastic insulated shell, silicone cup cover handle, safe and anti-scalding.

PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	GROSS CAPACITY
MMECP06	220-240V~ 50Hz	100-120W	0.6L

INTRODUCTION OF PARTS

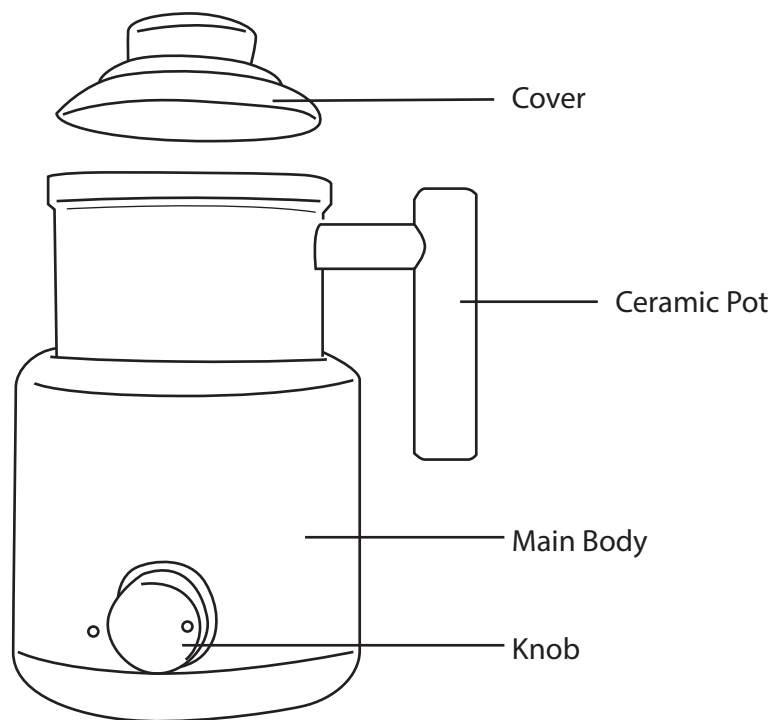

CONTROLS AND OPERATIONS

1. First put the switch knob in "OFF" position, turn on the power supply, then turn the switch to the position of "Keep warm" or "Stew", and the working indicator lamp will be on, which means that the product can work normally in the position of each power gear.
2. Put the ingredients to be stewed in the ceramic cup, add an appropriate amount of water (the water shall not exceed 80% of the capacity, and the rice shall not exceed 60% of the capacity), wipe off the water drop or other sundries on outer wall of the ceramic cup, then put the ceramic cup containing the ingredients in the aluminum pot, and put on the top cover.
3. Under the condition of filling up the water at room temperature, it takes about 2-5 hours to boil in "Stew" gear. To save the stewing time, it is advised to add about 70°C warm water.
4. First put the switch in "Stew" position, and when the ingredients are boiling, adjust the power gear according to the characteristics of the ingredients and stewing time; the "Keep warm" gear is used to keep the foods warm after they are cooked, and in the "Stew" gear the foods can be well cooked quickly and it is suitable for the foods which are difficult to be cooked well.
5. After the foods are stewed, put the knob in "Off" position and unplug the power cord.
6. Instructions for operation:
After the ingredients or rice are washed, put them in the ceramic cup, add an appropriate amount of water (the water shall not exceed 80% of the capacity, and the rice shall not exceed 60% of the capacity), wipe off the water drop and stain on outer wall of the ceramic cup, then put the ceramic cup in the body, and put on the top cover. When adding water at room temperature, in each mode, it takes about 1~2.5 hours to boil the water. To save the stewing time, it is advised to add about 70°C warm water.

Notes:

1. Please set an appropriate reservation time according to the characteristics of various ingredients and life experience, so that the ingredients can be fully soaked. When soaking perishable ingredients, the reservation time should not be set too long to prevent deterioration of ingredients;
2. If needing to change the reservation time in reservation mode, first press the "Power/Cancel" button to cancel the reservation, and then reset the function;
3. At low ambient temperature, it is advised to extend the stewing time to ensure that the food is well cooked.
4. If you want to open the top cover during stewing, please rotate the knob to "Off" position to make the machine body stop working, and open the cover when the water is no longer boiling, so as to prevent the boiling water in the pot from spilling and hurting people.