

CLEANING AND MAINTENANCE

The fan requires minimal maintenance. Do not try to fix it by yourself.

- Before cleaning and assembling, do not plug the power cord into the socket.
- To ensure that there is adequate air circulation to the motor, keep vents at the rear of the motor housing from dust, fluff, etc.
- Do not use a vacuum cleaner to clean these vents before unplugging.
- Do not disassemble the fan to remove fluff.
- Please wipe the exterior parts with a soft cloth soaked in mild detergent.
- Do not use any abrasive detergents or solvents to which may scratch the surface.
- Do not use any of followings as cleaning agent: gasoline, thinner, bending.
- Do not allow water or any other liquid into motor housing or interior parts.

Cleaning:

- Be sure to unplug the fan from the electrical supply mains before cleaning.
- Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.



Disposal

The product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicates such disposal procedures. The materials recyclable in accordance with their respective symbol. By means of re-use, material recycling or any other form of recycling old appliances, you are making an important contribution to the protection of our environment.



Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at www.mayer.sg

MAYER MARKETING PTE LTD

Customer Service Hotline: 6542-8383 (Mon - Fri 9:00am to 5:00 pm)

Service Centre Operating Hours:

Mon - Fri: 9:00am to 5:00pm

Sat: 9:00am to 12:00pm

Closed on Sunday & Public Holidays

71 Ubi Crescent, #06-02, Excalibur Centre, Singapore 408571.


For more information on warranty policy, please visit:

<https://mayer.sg/pages/warranty-return-and-exchange-policy>

mistral

16" Stand Fan

 MSF1699

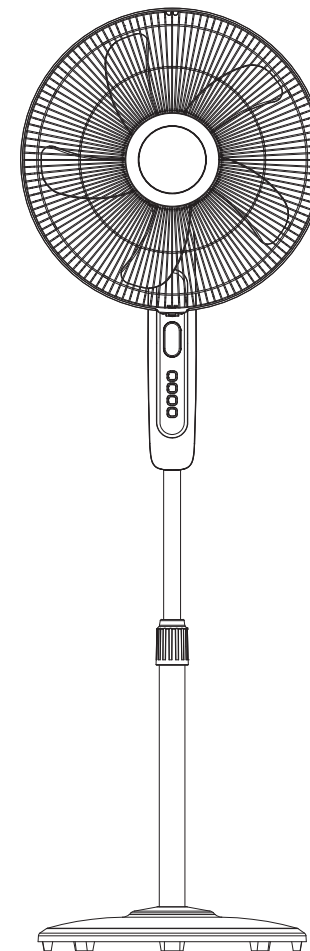

STAND FAN

Please read this instruction manual thoroughly before operating and keep it for future reference


IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. If the power cord is damaged, it must be replaced by the Service Centre to avoid a hazard.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug from the outlet when not in use and before cleaning.
- Do not unplug the appliance by pulling on the cord.
- Use the accessories from the appliance only, as other accessories not from the appliance may cause fire, electric shock or injury.
- Never insert fingers, pencils or any other object through the fan guards when the fan is running.
- Unplug the appliance when moving it from one location to another.
- Ensure that the appliance is switched off from the power supply before removing the guards for cleaning and maintenance.
- Do not use the appliance near the window, as wet weather may cause an electrical hazard.
- Do not leave the appliance operating when not in use.
- The appliance is intended for household and indoor use only.
- Please service/ conduct regular maintenance on the product for optimal use.
- Please discontinue use of the product immediately if the product behaves irregularly and contact the service centre.
- In the event that you dispose of the product, please do so in a safe manner, adhering to safety regulations.
- Year 1 – 2 of use: It is recommended to switch off the fan and allow the motor to rest for at least 1 hour after 10 hours of use. After 2 Years of Use: It is recommended to switch off the fan and allow the motor to rest for at least 1 hour after 3 hours of use. For your own safety, please clean your fan regularly. Accumulation of dust/ pet dander etc. may lead to motor fire or pose a fire hazard.

PRODUCT TECHNICAL PARAMETERS


MODEL	RATED VOLTAGE	RATED POWER	AIR VOLUME	MAX AIR FLOW
MSF1699	220-240V ~ 50Hz	50W	66.49 m ³ /min	5.87 m/s

 INTRODUCTION OF PARTS

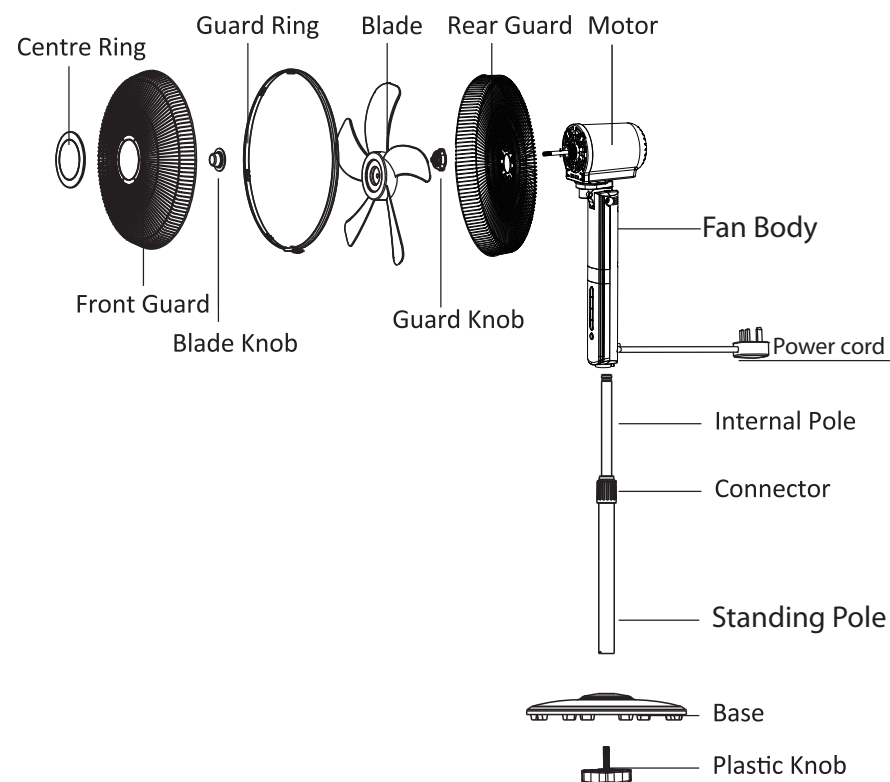




CONTROLS AND OPERATIONS

 - Open the gift box and check the parts by referring to the part illustration drawing.
- Insert the standing pole into the base and fasten the plastic nut. (Refer to Fig. 1)
- Loosen the connector and adjust the internal pole to the desired height.
(Note: If you can't find the internal pole, it slides inside the standing pole. You can pull it out.)
(Refer to Fig. 2)
- Loosen the thumb screw on the back of the fan body and attach it to the internal pole.
- Fasten the thumb screw in alignment with the groove on the internal pole. (See Fig. 3)

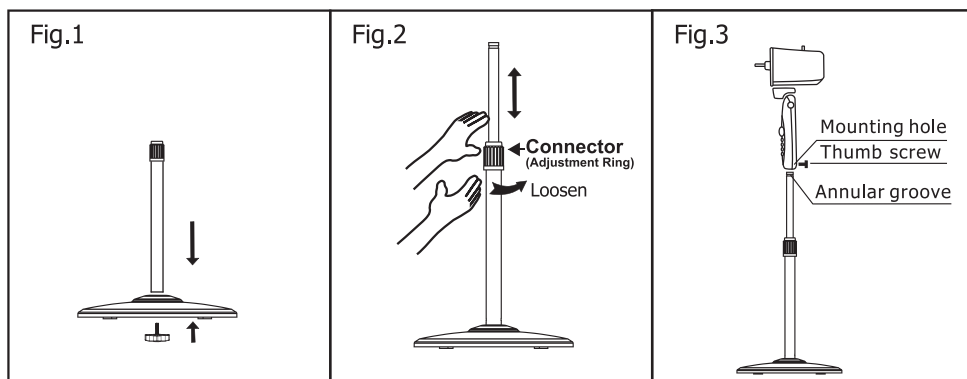

Assemble of the blade and guards

   - Remove the spinner and the plastic nut from the front side of the motor.
- Fix the rear grille to the motor then tighten the plastic nut again. (Fig.5)
- Discard PVC sleeve on shaft. Insert the blade into shaft, make sure the stopper pin is fitted into groove of the blade. Turn the spinner anti-clockwise to tighten the blade. (Fig.6)
- Fix both grilles with Guard Ring(Part 3) and then use screwdriver to tighten the locking screw. (Fig.7)

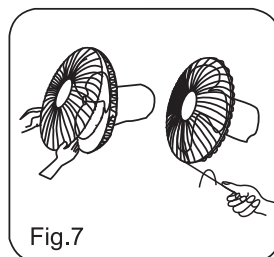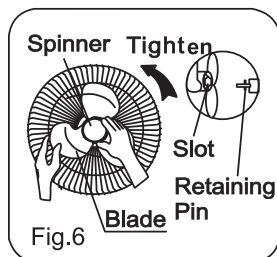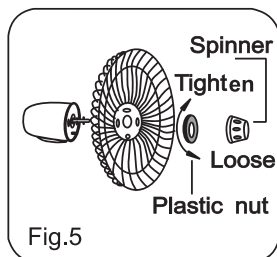

Control Panel Speed

- Speed is controlled by pressing the buttons of the speed regulator.
- 0---Stop 1---Lower 2---Medium 3---High

Oscillation

- To make/stop the fan head oscillate.
- Push down/pull up the clutch knob.
- The airflow can be adjusted upward or down-ward by loosening the tilt adjustment knob and adjusted the vertical angle as desired.
Retighten the knob to secure.

Height of the fan

- To adjust the height of the fan, loosening the Adjustment Ring by rising or lowering the internal pole, and tightening the Adjustment Ring to secure the fan (Fig. 2).

