 


# mistral

## 16" DC Wall Fan with Remote MWF4036DR

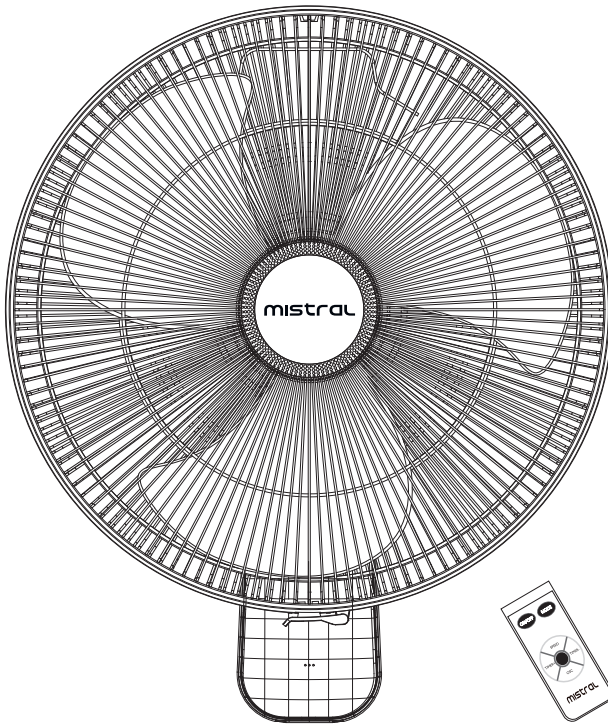

### WALL FAN

Please read this instruction manual thoroughly before operating and keep it for future reference

# IMPORTANT SAFETY INSTRUCTIONS

## Warning

- This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge unless they have been given supervision or instruction by a person responsible for their safety.
- Children should be supervised at all times while in use.
- Do not use the appliance if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped or damaged in any way. If the power cord is damaged, it should be replaced by the Service Centre to avoid any hazards.
- Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse the appliance, power cord, or power plug in water or any other liquid.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Never unplug the appliance by pulling on the cord.
- Only use accessories that come with the appliance, as other accessories may cause fire, electric shock, or injury.

 
## Wall Fan Safety Instructions

- It is recommended to switch off the product, and allow the motor to rest for at least 1 hour after 15 hours of use.
- For your own safety, please clean the product regularly. Accumulation of dust/ pet dander etc. may lead to motor failure or pose a fire hazard. Ensure that the product is switched off when cleaning.
- Year 1 -2 of use: It is recommended to switch off the fan after 15 hours of work and allow the motor to rest for at least 1 hour.
- After 2 Years of Use: It is recommended to switch off the fan after 10 hours of work and allow the motor to rest for at 1 hour.
- Never insert fingers, pencils, or any object through the fan guards when the fan is running.
- Unplug the fan when moving it from one locatino to another.
- Unplug the fan when removing the fan guards for cleaning.
- Do not use the fan near the windows, rain may create electrical hazard.
- Do not leave the fan running unattended.
- Ensure that the fanis switched off from the supply mains before removing the fan guard.
- Make sure that the wall fan is mounted at least 2.5m high from the floor.

## PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	AIR VOLUME	MAX AIR FLOW
MWF4036DR	100-240V~,50/60Hz	30W	64 m <sup>3</sup> /min	5.88 m/s

## INTRODUCTION OF PARTS

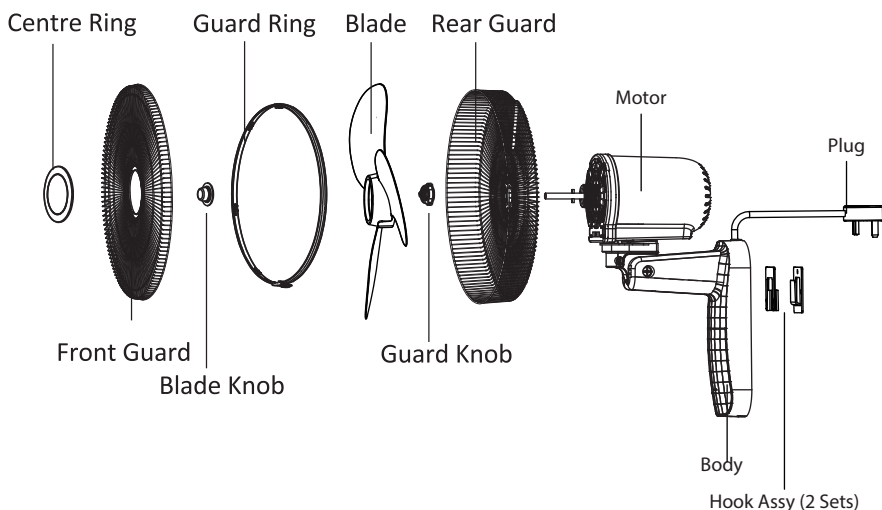


## CONTROLS AND OPERATIONS

### How to install the wall fan

The fan should be installed on a wall, solid wood, or pillar which stands vertically to the floor.

Caution:

 
- To prevent the fan from falling off, do not install it on walls less than 10cm in thickness or made of materials that is easily damaged.
- Install the hook firmly on the wall using 3 screws, as shown in the picture on the right, and make sure that the hook is horizontal to the floor. Please note that the hook should be at least 30cm away from the adjacent floor.
  - Install the mounting bracket to the fan body (installed already) and make the bracket slot onto the hook on the wall.

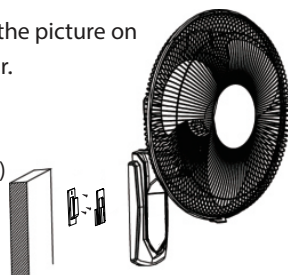

## OPERATION ON CONTROL PANEL

### ON/OFF & SPEED KEY

 The key is for switching on the fan. The fan will be started at low speed. Press this key again if the fan needs to be switched off. After the fan has started, press this key to select the fan speed. The sequence is 1, 2 and 10 when this key being touched repeatedly.

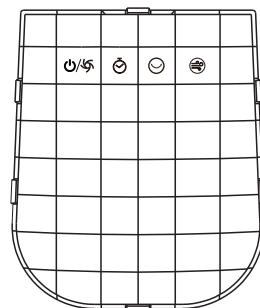

### TIMER KEY

This key is touched repeatedly or in press state. The time to be set for air deliver increased step by step of each 1 hour and sums to 7 hours. Do not press the timer key when the fan will be required to operate continuously. At the moment all timers led won't be on.

### OSC KEY

Press this key for oscillation function. To choose one direction, press this key when the fan is in the desired direction. Otherwise, rotate fan head by hand for wider oscillation.

### MODE KEY

Press this key to select mode. The sequence is normal, natural when this key is pressed repeatedly or continuously.

#### NORMAL WIND

The fan blows continuously from 1 to 10 which SPEED key sets.

#### NATURAL WIND

The fan blows at the speed set by a computer program imitating natural wind. Each time the gear is changed, it will work for 3 seconds and then enter the next gear. And so on, it operates in a cycle.

#### MEMORY FUNCTION

This fan comes with memory function. When you switch on the fan, it will run by the setting of last time. If unplugged, the memory function will be ineffective.

Remote Control:

REMOTE CONTROL OPERATION

 
- Point the remote control towards the fan and press the desired key.
- The remote control works at a distance of up to approximately five metres and at an angle of 30 degrees from the panel LED display.
- Ensure there is no direct sunlight facing the same direction.
- Remove batteries before disposing remote control.

BATTERIES

- Slide the battery compartment cover.
- Insert the batteries, and make sure that the batteries are placed as shown in the Battery Compartment diagram.
- Slide back the battery cover.

Notes:

- Do not use rechargeable batteries.

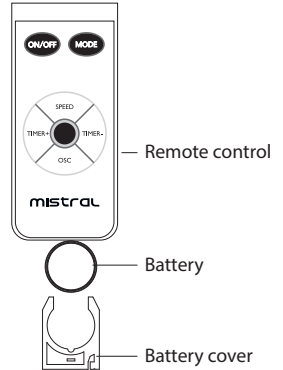

Tilt Adjusting :

- To adjust the air flow upward or downward, push the guards lightly to the desired direction.

Height Adjusting :

- The lower standing pole can be taken off to adjust to a shorter height.

## CLEANING AND MAINTENANCE

The fan requires minimal maintenance. Do not try to fix it by yourself.

- Before cleaning and assembling, do not plug the power cord into the socket.
- To ensure that there is adequate air circulation to the motor, keep vents at the rear of the motor housing from dust, fluff, etc.
- Do not use a vacuum cleaner to clean these vents before unplugging.
- Do not disassemble the fan to remove fluff.
- Please wipe the exterior parts with a soft cloth soaked in mild detergent.
- Do not use any abrasive detergents or solvents to which may scratch the surface.
- Do not use any of followings as cleaning agent: gasoline, thinner, bending.
- Do not allow water or any other liquid into motor housing or interior parts.

Cleaning:

- Be sure to unplug the fan from the electrical supply mains before cleaning.
- Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.



### Disposal

The product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicates such disposal procedures. The materials recyclable in accordance with their respective symbol. By means of re-use, material recycling or any other form of recycling old appliances, you are making an important contribution to the protection of our environment.



Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

## Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at [www.mayer.sg](http://www.mayer.sg)

### MAYER MARKETING PTE LTD

Customer Service Hotline: 6542-8383 (Mon - Fri 9:00am to 5:00 pm)

#### Service Centre Operating Hours:

Mon - Fri: 9:00am to 5:00pm

Sat: 9:00am to 12:00pm

Closed on Sunday & Public Holidays

71 Ubi Crescent, #06-02, Excalibur Centre, Singapore 408571.

For more information on warranty policy, please visit:

<https://mayer.sg/pages/warranty-return-and-exchange-policy>