 


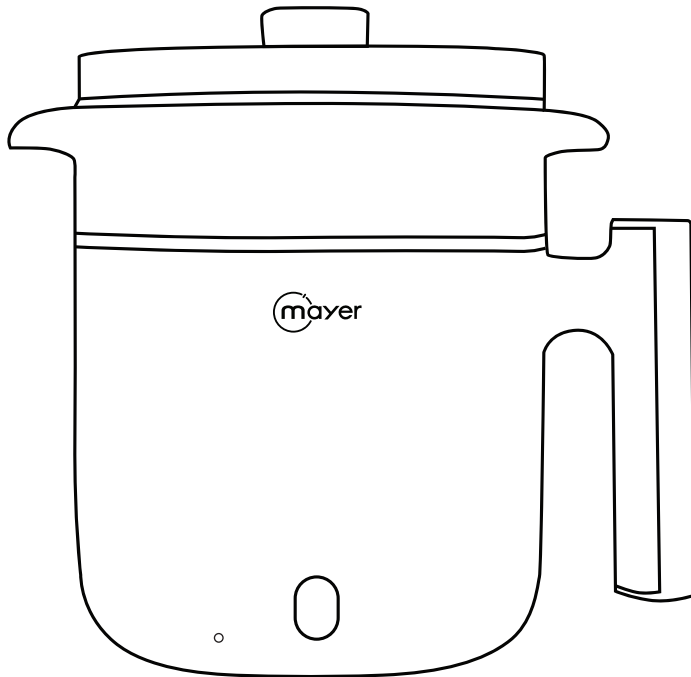

Electric Cooker

MMEC1560



ELECTRIC COOKER

Please read this instruction manual thoroughly before operating and keep it for future reference

IMPORTANT SAFETY INSTRUCTIONS


- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- When using the appliance, the appliance should be placed on a flat, stable surface and out of reach of children to prevent children from pulling the power cord or touching the appliance, which may overturn and burn people or damage the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. If the power cord is damaged, it must be replaced at the Service Centre to avoid a hazard.
- Do not let the power cord hang over the edge of the table or touch hot surfaces. If the power cord is too long, coil it into the cord storage at the bottom of the power base.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse the appliance, cord or plug in water or other liquid.
- Do not use the appliance on a wet surface such as sink.
- Unplug from the outlet when not in use and before cleaning.
- Do not unplug the appliance by pulling on the cord.
- Use the accessories from the appliance only, as other accessories not from the appliance may cause fire, electric shock or injury.
- To avoid circuit overload, do not operate high wattage appliances on the same circuit.
- Do not turn on the appliance if there is no water in it.
- Do not dry burn appliance if there is no water in it, otherwise it will easily cause the heating plate to turn yellow or the heating tube to be damaged.
- Do not operate the appliance if water is below the minimum level.
- Do not fill the water exceed the maximum level, otherwise the hot water will overflow or splash out and cause water leakage.
- Do not place any container in the pot for heating, it may cause an explosion hazard.
- Do not move the appliance when it is operating.
- Do not place this appliance on or near a hot gas or electric burner or on the top of other electric appliances.
- Do not put any items over the steam vent.
- To avoid burns, do not touch the steam vent.
- Before using the appliance, please make sure the lid is properly covered to avoid burns.
- Do not allow the steam to contact your skin when opening the lid.

- Before the appliance is fully cooled down, please hold the lid by the lid handle, and the pot by the cool touch handles. Do not touch the other parts that are hot which may scald your hand.
- Incorrect use of the appliance may cause serious burns.
- Do not use outdoors. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Breakfast type environments.
- When cleaning the appliance, please do not immerse the appliance into water. Water should not contact with any exposed electrical area and must be dried at all times, especially before use.
- Do not clean the inner container or appliance body with chemical cleansers, steel wool pads or other abrasive materials.


PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	GROSS CAPACITY	STEAM TRAY CAPACITY
MMEC1560	220-240V~, 50-60Hz	600W	2L	1L

INTRODUCTION OF PARTS

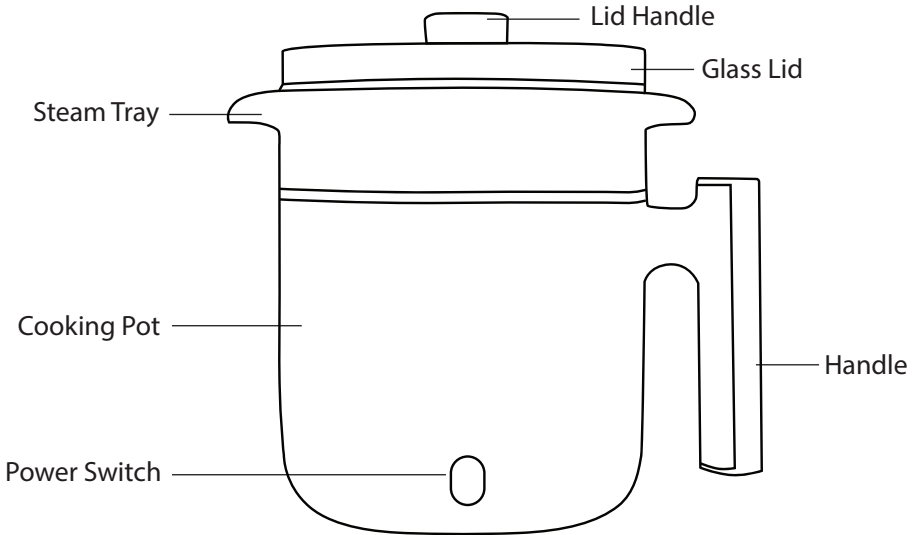

Control Panel

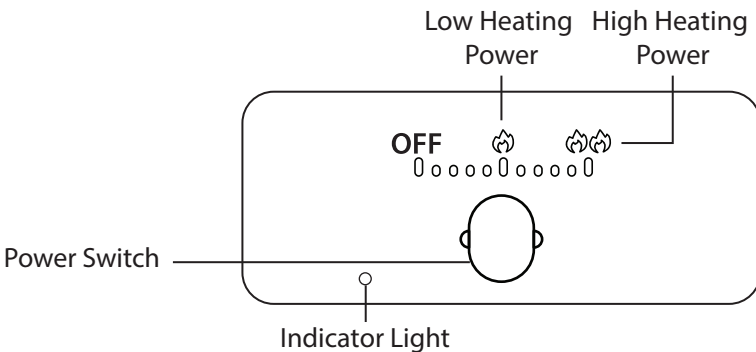

CONTROLS AND OPERATIONS

Before using the appliance

- Ensure that the power switch is at “OFF” position before attaching the power cord to the power supply and turning on the appliance.
- The main power supply should also be turned off before plugging the power cord into the power supply.
- When using the appliance for the first time, it is recommended to boil the water 1-2 times and then discard it.
- Add water between the minimum and maximum level marking.

Operating the appliance

- Connect the power cord into the cooking pot and ensure the power switch is at “OFF” position.
- Plug in the power cord to the main supply and turn on the main supply.
- Add water or food ingredients into the cooking pot. Make sure the ingredients placed are between the minimum and maximum level marking.
- Turn on the appliance by sliding the switch to “Low Heating Power” or “High Heating Power” to select the desired heating mode.
- The indicator will light up in dimmed red when the power is set to "Low Heating Power", and light up in bright red when the power is set to "High Heating Power".
- After water boiled, slide the power switch to "Low Heating Power" to prevent overflow.
- After using the appliance, turn off the appliance by sliding the switch to the left, back to “OFF” position.

Note:

Steamer tray is an optional accessory. If you do not need to use, you can remove when using the appliance, and just use the cooking pot only.

CLEANING AND MAINTENANCE

- Before cleaning the appliance, ensure that the power switch of the appliance is set to “OFF” and the power cord is unplugged from the main switch.
- Once the appliance has been cooled down, remove the connecting end of the power cord that is connected to the appliance.
- After use, the appliance must be completely cooled before cleaning.
- The appliance must be clean after every use to prevent odors.
- Do not use strong washing products such as scrubbing powder, cleaning paste, etc., as it will damage the appliance.
- Do not use any abrasive, scouring or metal sponge to clean the appliance.
- Always use a gentle and soft sponge with some liquid detergent to wash the inside cooking area of the appliance.
- After every use, use a damp cloth to wipe the power cord and outer surface of the cooking pot. After wiping with a damp cloth, wipe it with a dry cloth to ensure it is thoroughly dry before keeping and storage.
- Do not immerse the entire cooking pot into the water for cleaning as this will damage the appliance and its electrical components.
- If needed, put some detergent and warm water into the inside of the cooking pot to soak before washing it. Please put the pot on a table to soak. Do not put it in a basin or sink.
- Do not place the appliance in the dishwasher or dish dryer.

TROUBLESHOOTING

Problem	Cause of Issue	
The appliance does not work and the indicator light is switched off.	There is a power failure.	Please contact the Service Centre.
	The power plug is not properly inserted.	Check if the power plug is properly plugged in.
	The power socket is not switch on.	Check the power switch on the power socket is switch on.