



Electric Kettle

MMEK171D



ELECTRIC KETTLE

Please read this instruction manual thoroughly before operating and keep it for future reference

Product design, features and specifications are correct at the time of printing and are subject to change without prior notice.

IMPORTANT SAFETY INSTRUCTIONS

- This appliance is intended for household use only. It is not fit for commercial use. Do not use the appliance to heat anything other than water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning its use by a person responsible for their safety. Children should always be supervised and never allowed to handle or operate the appliance unsupervised, as boiling water can cause serious burns.
- Do not switch on if there is a possibility that the water in the kettle is frozen.
- Do not fill above the "MAX" level, as boiling water may overflow. Ensure water is above the minimum level before operation.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. If the supply cord is damaged, it must be replaced by the Service Centre to avoid a hazard.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse the appliance, cord, or plug in water or other liquid.
- Unplug the appliance when not in use, before cleaning, and always turn it off at the main plug. Never unplug by pulling on the cord.
- Use only the accessories provided with the appliance.
- Do not use the kettle outdoors. Keep it away from sources of heat, direct sunlight, humidity, and sharp edges. Do not operate the appliance with wet hands. If the appliance is humid or wet, unplug it immediately.
- This kettle must be used with the power base provided inside the packaging.
- Warning: Avoid spillage on the power connector and power base.
- Warning: Misuse of this appliance may cause injury.
- The heater base's surface and other accessible parts of the appliance may remain hot during and after use. Do not touch these surfaces; use only the handle to carry the appliance.
- Always ensure that the lid is tightly closed before boiling or immediately after use if it contains hot water, to prevent hot water from spilling.
- Do not open the lid when the water is boiling or immediately after use if it contains hot water, as hot steam may escape and cause burns. Keep the lid closed when pouring water.
- Do not dry boil the kettle. Operating the appliance without water may cause damage and overheating.
- Use the appliance only on a level, sturdy, and stable work surface.
- Before inserting the plug into the socket, ensure that the mains voltage matches that of the appliance. This information can be found on the rating label.


- Do not touch the hot spout when pouring, as hot water and steam may escape. Always pour slowly and away from your body.
- Allow at least 30 minutes for the appliance to cool before handling or cleaning. Even when unplugged, residual heat can still cause burns.
- Do not move the appliance while it is in use or immediately after use if it contains hot water, even when unplugged. Always allow the appliance to cool completely before handling or relocating, as moving it while hot may cause burns or spills.
- During operation, the kettle body becomes hot as it contains hot water. Handle with care.

PRODUCT TECHNICAL PARAMETERS


MODEL	RATED VOLTAGE	RATED POWER	GROSS CAPACITY
MMEK171D	220-240V~, 50-60Hz	1850-2200W	1.7L

*Specifications are subject to change without prior notice.

INTRODUCTION OF PARTS

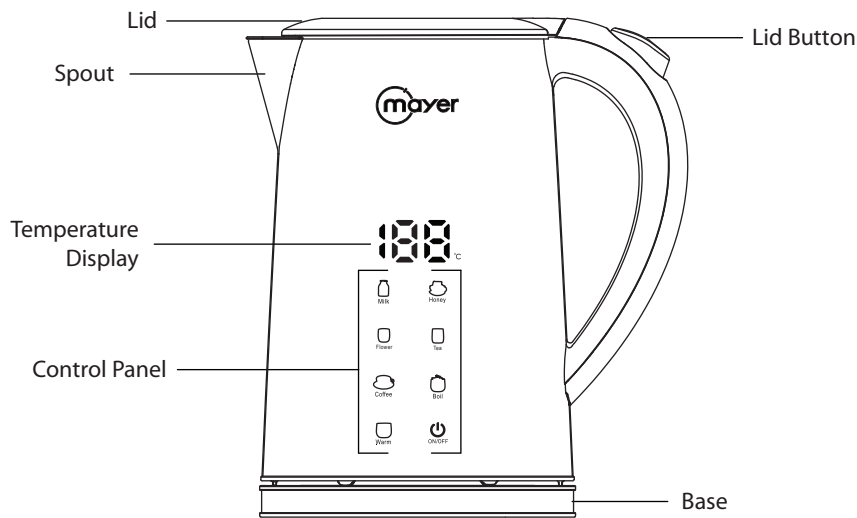

Control Panel

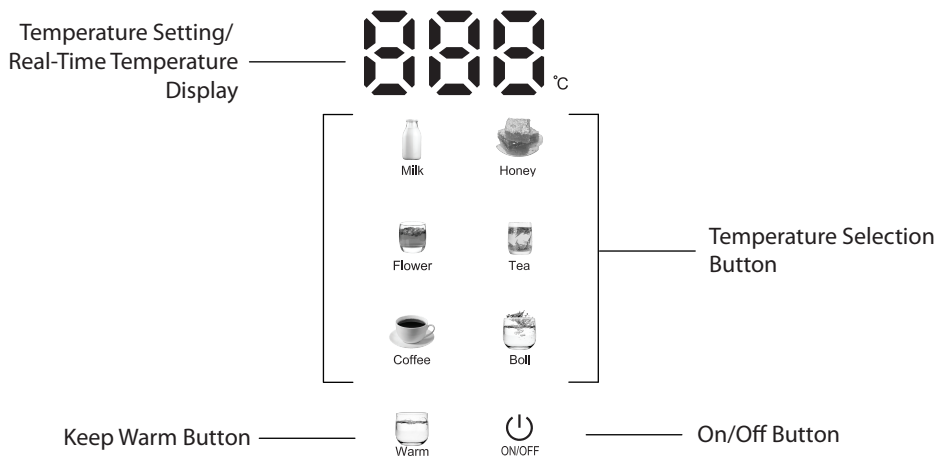

*Pictures are for illustration purpose only.

CONTROLS AND OPERATIONS

Before use

- Carefully unwind the power cord from the bottom section of the base. Please ensure that the power cord does not become tangled up.
- Check the electrical voltage is the same as the appliance.
- Never fill water above the MAX level.
- Before using for the first time, fill water to "MAX" level, boil water and discharged hot water, repeat this two times to remove possible odour.
- Do not touch kettle body to avoid scald when it is working.

How to use

1. Remove the kettle from the base to fill water.
2. Press the button to open the lid and fill in the amount of water between the "MAX" and "MIN" level.
3. Close the lid, place the kettle back on the base. Connect the appliance to the power supply. There will be a beep sound and the LED display will flashes for 3 seconds when switched on and enters Standby Mode then.
4. During Standby Mode, the display shows the current water temperature, and all button indicators remain illuminated. If no operation is performed for 1 minute, the kettle enters Sleep Mode.

5. During Sleep mode, only the On/Off button indicator flashes. The display and all other button indicators switch off. Press any button to activate the kettle. It emits one beep and returns to Standby Mode, displaying the current water temperature.

Temperature Selection

1. In Standby Mode, press one of the preset function buttons from the 6 water temperature settings below:

Menu		Temperature	Description
	Milk	40°C	Up to 30 mins
	Honey	55°C	Up to 30 mins
	Flower	70°C	Up to 30 mins
	Tea	80°C	Up to 30 mins
	Coffee	90°C	Up to 30 mins
	Boil	100°C	Boil only. Keep warm function is not available.

2. Select your desired temperature settings to heat up/ boil water.
3. The selected function indicator flashes and the preset target temperature is displayed.
4. Press the On/Off button to start heating.
5. During heating:
- The display shows the current water temperature.
 - The On/Off indicator and the selected function indicator remain illuminated.
 - All other button indicators switch off.
6. When the selected temperature is reached:
- The kettle emits two beeps.
 - Heating stops automatically.
 - The display continues to show the current water temperature.
 - The kettle returns to Standby Mode.

Note:

- Press the On/Off button at any time during heating to cancel the current operation.

Quick Boil

1. From Standby Mode, press the On/Off button without selecting a preset function.
2. The kettle starts boiling water using the default Boil programme.
3. When boiling is complete:
 - The kettle emits two beeps.
 - Heating stops automatically.
 - The display shows the current water temperature.
 - The kettle returns to Standby Mode.
4. If left idle for 1 minute, the kettle enters Sleep Mode.

Note:

- Heating cannot be started directly from Sleep Mode. Activate the kettle first before press the On/Off button or selecting a function.

Keep Warm Function

1. Select the desired temperature from the 6 water temperature settings (refer to the table "Temperature Selection")
2. Press the Warm button to activate the Keep Warm function.
3. The Warm and On/Off indicators remain illuminated, while the selected temperature indicator stays on.
4. The display continuously shows the current water temperature.
5. If the selected temperature is higher than the current water temperature:
 - The kettle heats the water until the selected temperature is reached.
 - It emits two beeps and automatically enters Keep Warm Mode.
6. If the selected temperature is lower than the current water temperature:
 - The kettle emits two beeps.
 - No heating is performed.
 - The kettle enters Keep Warm Mode immediately.
7. During Keep Warm Mode:
 - The Warm indicator, On/Off indicator and selected temperature indicator flash.
 - All other button indicators remain off.
 - The kettle maintains the selected temperature for 30 minutes.
8. Press the Warm button again to cancel Keep Warm mode and return to Standby Mode.

Note:

- The Keep Warm function is only available when the selected temperature is 95°C or below.
- Press the On/Off button at any time to cancel the keep warm function.

Removing the Kettle During Heating or Keep Warm

- If the kettle is lifted from the power base during heating or Keep Warm mode:
 - o Heating or keep warm stops immediately.
 - o The display and all indicators switch off.
 - o When the kettle is returned to the power base, it returns to Standby Mode.
 - o The previous heating or Keep Warm operation will not resume automatically.

Memory Function

1. The kettle remembers the last selected function under the following conditions:
 - If a function is selected in Standby Mode but not started, the kettle will recall the selected function after waking from Sleep Mode.
 - After a heating or Keep Warm cycle has finished, the last selected function is retained when the kettle wakes from Sleep Mode.
2. The memory will be cleared if:
 - The kettle is removed from the power base, or
 - The power supply is disconnected.

CLEANING AND MAINTENANCE

- Always switch off the appliance before removing it from the base.
- Ensure that the appliance is switched off when you set it back onto the base.
- Keep the lid closed when pouring the water out.
- During operation the kettle body becomes hot. Do not touch it and allow the appliance to cool down before storing it away.
- If the appliance is not used for a long time, boil fresh water to the MAX mark 3 - 4 times and pour the water away before reusing again.
- Always turn the appliance off before cleaning it and unplug it from the main plug. Wait until the appliance has cooled down.
- Never immerse the appliance or the base into water or other liquids, this might result in an electric shock or fire.
- Do not use any wire brush or other abrasive objects.
- Do not use any acidic or abrasive detergents.
- Clean the perforated area in the spout with a nylon brush from the inside.
- Rinse the water container out with clean water. Then dry it off with a cloth.
- Clean the housing after use with a slightly damp cloth.
- Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the appliance.
- To prolong the appliance's life, please descale the appliance regularly.

Descaling

- Regular descaling is necessary to ensure a long life for your kettle.
- The frequency of the descaling operation depends on the hardness of the water and how often the appliance is used. If the tap water is used, it is best to descale it after 8-10 boils.

Using White Vinegar:

1. Put a small amount of vinegar or commercially available descaling agent and water, switch the appliance on and boil for 1-3 minutes to descale.
2. After descaling the appliance, boil fresh water two to three more time to remove any residues. Do not consume this water.

Using Lemon:

1. Cut a lemon into two halves and squeeze the juice in the appliance, then use the two halves and rub the inside parts to remove any hard water stains. Cut the same lemon into small pieces and add the pieces to the lemon juice inside the kettle.
2. Add water into the kettle, do not go above the MAX level.

3. Boil the lemon water for 1-3 minutes to descale. After boiling, leave the lemon water in the kettle for another half an hour, and repeat to boil the lemon water again once.
4. Pour and rinse the kettle 4-5 times with clean cold water.

Note:

- If necessary, repeat the steps above several times, then appliance will be ready to use.
- Do not immerse into water. The surface of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.

TROUBLESHOOTING

Problem	Cause of Issue	Solution
Appliance does not power on	The power plug is not plugged in	Check the socket with another appliance
		Plug in the power plug
		Check the main circuit breaker
	The appliance is damaged	Please contact the Service Centre for repair.
	When used with too little or without water, the appliance has not cooled now sufficiently	Allow the appliance to cool down for 15 minutes.
Appliance does not switch off after boiling	The lid is not closed properly	Close the lid properly
	The appliance is damaged	Please contact the Service Centre for repair.
Appliance switches off before boiling	The inside of the kettle is stained with excessive limestone	Descal the appliance as instructed
	The appliance is damaged	Please contact the Service Centre for repair.
The display light does not light up	The power plug is not plugged in	Plug in the power plug
	The light indicator is damaged	Please contact the Service Centre for repair.
Display "E1"	NTC short circuit or open circuit.	Please contact the Service Centre for repair.



Disposal

The product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicates such disposal procedures. The materials recyclable in accordance with their respective symbol. By means of re-use, material recycling or any other form of recycling old appliances, you are making an important contribution to the protection of our environment.



Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at www.mayer.sg

MAYER MARKETING PTE LTD

Customer Service Hotline: 6542-8383 (Mon - Fri 9:00am to 5:00 pm)

Service Centre Operating Hours:

Mon - Fri: 9:00am to 5:00pm

Sat: 9:00am to 12:00pm

Closed on Sunday & Public Holidays

71 Ubi Crescent, #06-02, Excalibur Centre, Singapore 408571.

For more information on warranty policy, please visit:

<https://mayer.sg/pages/warranty-return-and-exchange-policy>