


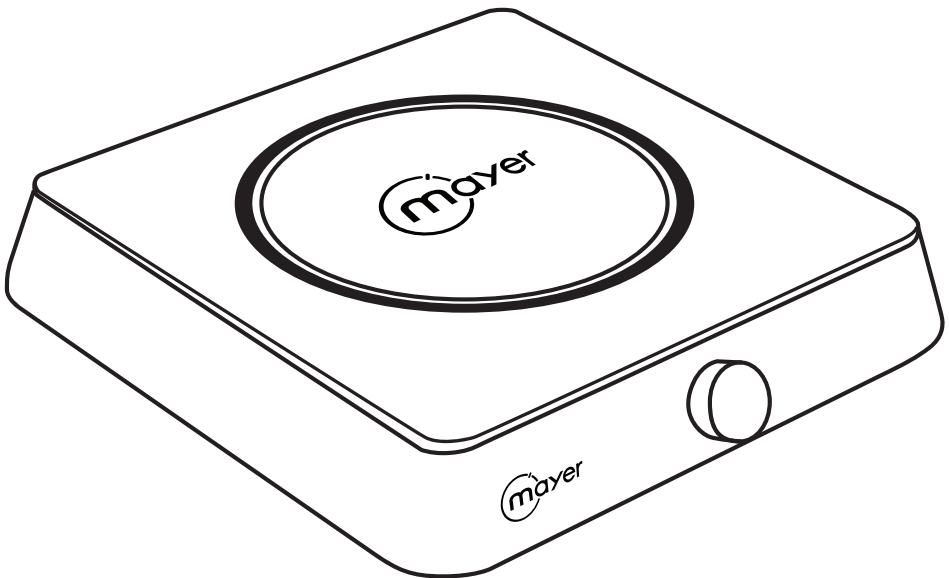

Portable Induction Cooker MMIC1619



INDUCTION COOKER

Please read this instruction manual thoroughly before operating and keep it for future reference

IMPORTANT SAFETY INSTRUCTIONS

For safety reasons and to avoid damage to the appliance or injuries to people, please abide by all the safety instructions below.

Ignoring safety warnings may result in injuries.

This appliance does not take into consideration the following situations:

- Use by children or disable people without supervisions.
- Children treating it as a toy.
- Do not immerse the appliance in water.
- Never heat foods in sealed containers, such as compressed products, cans, or coffee pots, to avoid explosion caused by heat expansion.
- Do not directly rinse this induction cooker underwater. Do not spill water or soup into the internal parts of the induction cooker.
- To avoid affecting product performance and prevent injury, do not heat empty pots. When in use, do not leave the appliance without supervision for a long time. When leaving the appliance without supervision, make sure there is enough water in the pot.
- To avoid accidents, do not place the induction cooker, when in use on a gas stove (the magnetic lines can heat the metal parts of the gas stove.)
- Do not heat iron items on the induction cooker heating plate to avoid danger caused by high temperatures.
- The utensils provided for the induction cooker can only be used for cooking with it. These cooking utensils cannot be used on both induction cooker and gas stove.
- To avoid injuries such as scalding, do not let children operate the appliance alone.
- Unplug the power cord from the outlet after use to avoid fire, and/or damaging the electronic components, caused by prolonged electrical connection.
- To avoid danger, do not insert any foreign object such as iron wire or block the air ventilation opening or air entry port.
- People with heart pacemakers should consult a doctor. Only use the appliance after confirming that it does not affect the pacemaker.
- To avoid danger, do not place paper, aluminium foil, cloth, or other unsuitable articles onto the induction cooker heating plate for indirect heating.
- To avoid damage, avoid causing impacts on the heating plate. If damaged, please stop using it and take it to the Service Centre for repair.
- When using the induction cooker, do not put it on any metal platform (such as iron, stainless steel, aluminium), or place a non-metal pad less than 10cm thick on the heating plate.

- When using the induction cooker, place it horizontally and allow at least 10cm of free space between the sides and back of the induction cooker in narrow spaces. To avoid hindering release of heat, do not cover the ventilation opening.
- To avoid danger, if the power cord is damaged, please contact the Service Centre.
- Please use a dedicated and high quality power outlet. Do not use poor quality outlets. Do not share the power outlet with electrical appliances with high power ratings, such as air conditioners, electrical stoves etc to avoid fires cause by overburdening the outlet.
- Do not touch the cooker plate with sharp tools to avoid cracking or damaging the plate. If cracking is found on the cooker plate, turn off the appliance to avoid any electrical shock that might occur.
- When using the induction cooker or after use, please keep it clean. Protect the induction cooker from bugs, dust, and humidity. Avoid letting cockroaches etc fall into the internal parts of the induction cooker and causing a short circuit of the electrical board. When not in use for long period, please clean it and put it into a plastic bag to store it.
- The cooker cannot be overloaded. Overloaded the plate may damage the plastic cover and cooker plate.
- Metal objects, such as knives, forks, spoons, and lids, should not be put on the surface of the cooking area, since they can become heated.
- Do not use the induction cooker near a gas stove, kerosene stove, gas cooker or in any space with an open fire or an environment with high temperature.
- Do not use the induction cooker by putting it onto a carpet, tablecloth or thin paper to avoid clocking the air inlet opening or air outlet opening, which results in influencing heat emission.
- Always clean the induction cooker to prevent mess from getting into the fan, which could influence the normal operation of the appliance.
- When operating the appliance or after moving the pot, the cooking area will remain hot for a period of time. Do not touch it, be careful of scalding caused by the high temperature.

Mandatory:

The appliance is intended to be used in household and applications such as:

- Staff kitchen areas in shops, offices, and other working environments.
- Farm houses.
- By clients in hotels, motels, and other residential type environments.
- bed and breakfast type environments. Indoor use only.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Concerning use of the appliance by a person responsible for their safety.


Mandatory:

- We suggest that you should periodically check that there are no object (glass, paper, etc) that could obstruct the inlet under your induction cooker.
- Never have the induction cooker work without food inside, otherwise its operational performance may be affected and danger may happen.
- Keep electrical appliance out of reach from children or inform person. Do not let them use the appliance without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The instruction shall state that appliances are not intended to be operated by means of an external timer or separate remote control system.


PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER
MMIC1619	220-240V, 50/60Hz	500W-1600W

INTRODUCTION OF PARTS

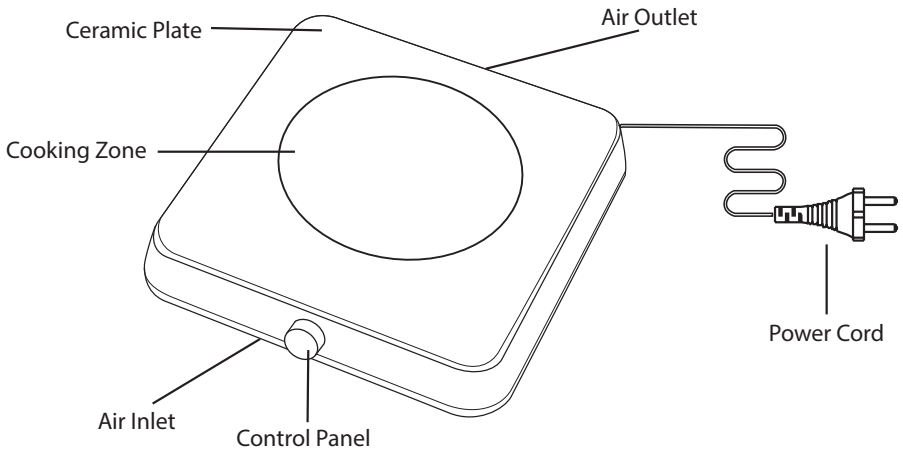

Control Panel

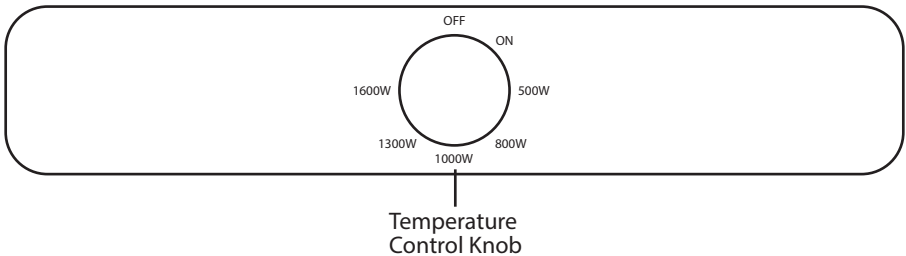

CONTROLS AND OPERATIONS

The induction cooker is able to meet various kinds of cooking demands by electromagnetic heating, high thermal efficiency, is safe and reliable, easy to clean.

Before first use:

- Read this guide, taking special note of the “Safety Instructions” section.
- Remove any protective film that may still be on your ceramic plate.

Plug in:

- After the power supply is connected, and there will be a beep sound. The LED flash, indicating that the induction cooker is in standby mode.

Put the pot on the ceramic plate:

- Make sure the air inlet and outlet are not blocked and keep utensils away from the immediate surrounds of the ceramic plate.
- Make sure the cookware which has food or liquid is placed in the centre of ceramic plates.

Control Knob

- Turn clockwise direction to increase power setting, and there will be a beep sound, the LED light will switch on, and the power setting from 1 - 5 heat level.
- The default heating time is 2 hours, and the induction cooker will stop heating automatically, the LED will flash indicating that the induction cooker will return to standby mode.
- Turn counter clockwise direction to decrease power setting, there will be a beep sound and the induction cooker will switch off.

Compatible Cookware

- Requirement for pot materials: containing magnetic inducting materials.
- Shape requirement: flat bottom, with the diameter more than 14.5cm and less than 18cm.
- After the first use, some white spots would appear at the bottom of the pot. This is normal.
- Heat some vinegar into the pot to about 60-80°C, then wipe the spots away with a brush.
- Incompatible pots materials: glass ceramic, aluminium, copper, and non-magnetic material.
- If the pot removed, the induction cooker will stop heating immediately. After the buzzer sounds for 1 minute, it will go into standby mode automatically.



Iron oil frying pan



Stainless steel pot



Iron pan



Iron kettle



Enamel stainless steel kettle



Enamel cooking utensil



Iron plate

CLEANING AND MAINTENANCE

- Before cleaning, please switch off the appliance, wait for it to cool down before disconnecting the power plug from the power outlet.
- After using the induction cooker for a long time, the air inlet and outlet will pile up with dust or other dirt, please wipe it with a soft dry cloth and dust the air inlet and outlet with brush or mini vacuum cleaner
- For oil spots on the cooker plate, wipe using a soft moist cloth with a little tooth paste or mild detergent. And then use a soft moist cloth to wipe it until no stains remains.
- When not in use for long periods of time, please disconnect the power plug from the power outlet and protect the induction cooker from any dust or bugs.

TROUBLESHOOTING

Problem	Solution
After plugging in the power cord and pressing the "ON / STANDBY" key, the indicator and display do not light up.	<ul style="list-style-type: none"> • Is the power plug properly connected? • Is the switch, power outlet, fuse, or power cord damaged?
The "ON / STANDBY" indicator lights up and the display works normally, but heating does not start.	<ul style="list-style-type: none"> • Is the pot material proper? • Is the appliance in a "Preset" working status? • For other causes, please take the appliance to a repairing and maintenance site to be fixed.
Heating suddenly stops during the process.	<ul style="list-style-type: none"> • Is the temperature of the oil too high when frying dishes? • Is the temperature of the surroundings very high? • Is the air inlet or outlet of the induction cooker blocked? • Is the default heating time of the induction cooker over? • The self-safety protection of the induction cooker starts, wait for several minutes and connect power to use it.

Emergency

During use, if there is some abnormal issue with the appliance, please unplug immediately and disconnect the power. For any failure of the appliance, please contact the Service Centre for maintenance.