



Travel Thermo Blender with Battery MMPB503



BLENDER

**Please read this instruction manual thoroughly
before operating and keep it for future reference**

Product design, features and specifications are correct at the time
of printing and are subject to change without prior notice.

IMPORTANT SAFETY INSTRUCTIONS

- I. Before the appliance is connecting to the power supply, make sure that:
 - The blender is completely mounted.
 - The power supply corresponds to the rated specification.
2. Always remove the plug from the socket after being used.
3. For the best blending results, do not fill the juicer cup beyond 510ml.
4. Switch power ON and OFF intermittently to remove sticky particles of food inside the juicer cup.
5. Ingredients should be cut into small pieces no larger than 10mm diameter before blending.
6. Do not use the appliances without any load or overload ingredients in the juicer cup.
7. The working time of the appliance is 40 seconds per cycle. If the appliance is too hot during operation, it is advisable to stop for 5-10 minutes. You may continue operate after the motor has cooled down.
8. Do not overload the juicer cup with content at any time or use it for assessing maximum running time. This appliance is fitted with a resettable thermal link to protect the motor from overheating. If the motor overheats, the thermal link will disconnect the power supply and will automatically re-connect the power supply in 30 minutes once the motor cools down.
9. Do not open the juicer body or the motor unit during operation to prevent food ejection or disruption of the mixing process.
10. Do not fill the juicer cup with ingredients that are hotter than 60°C.
11. Follow assembly instructions closely. This appliance must be properly fastened before operating. This appliance is intended for household use only.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction regarding the appliance's use by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.
14. Be careful when handling the sharp cutting blades. emptying the cup and during cleaning.
15. Do not operate the appliance on tilted or unstable countertops.
16. Do not place the appliance in an environment with high magnetic intensity, high temperature, inflammable and explosive gas, as the components may malfunction or cause a fire.
17. Do not place the appliance too close to the stove to prevent damage, fire or personal injury.
18. Do not immerse the main unit in water to prevent short circuit, fires, or damage to the appliance.

19. Maintain a minimum distance of 30 cm between the appliance and other kitchen appliances for optimal safety.
20. Due to the use of food-grade plastic materials, processing dark-pigmented ingredients like carrots or pumpkins may cause staining. Ensure the appliance is clean regularly to prevent discoloration. The staining will not affect normal use.
21. Bubble containing food/foamed food such as cream, custard and toppings may influence the appliance's operation.
22. The appliance cannot be used for blending too hard substances or dry substances, otherwise the blade could be blunted.


PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	RATED CAPACITY	
MMPB503	3.7V $\equiv$	50W	0.51L	
WORKING CAPACITY	INPUT	CHARGING TIME	USAGE TIME	BATTERY CAPACITY
0.3L	DC 5V $\equiv$ 1A	1.5 - 2 HOUR	40 SEC. x 6 CYCLES	1200mAh


*Specifications are subject to change without prior notice.

INTRODUCTION OF PARTS

1. Motor Unit
2. Charging Port
3. ON/OFF Button
4. SUS 304 12-leaf blade
5. Juicer Cup

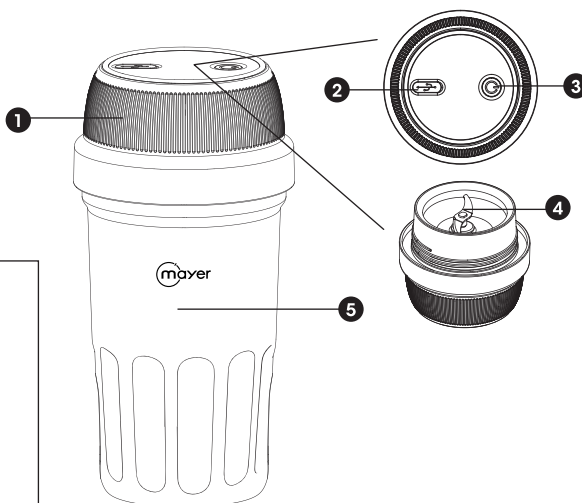

Accessories

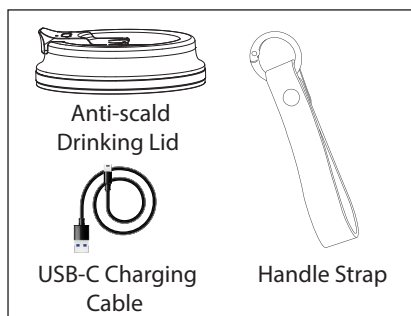


*Pictures are for illustration purpose only.

CONTROLS AND OPERATIONS

Operation Instructions

 1. Prepare the ingredients and cut them into small cubes with 10mm diameter.

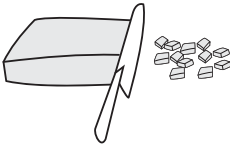

2. Turn the motor unit and juicer cup counterclockwise to open.



3. Place the ingredients in the juicer cup and add an adequate amount of liquid for better blending performance.


Note: The total amount of ingredients and liquid should not exceed two-thirds of the juicer cup.



4. Place the motor unit into the juicer cup, tighten it clockwise until the green light flashes five times and ensure that the ingredients do not leak out.




5. After the appliance is properly tightened, double click the ON/OFF button to start operating.

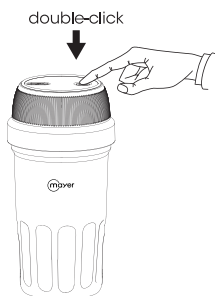


6. Once the appliance starts operating, gently turn it upside down.

Note: The machine will automatically stop after 40 seconds of operation. To stop the blending midway, click the ON/OFF button to halt the operation.

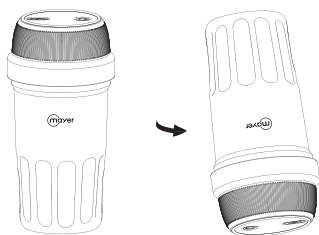

7. Replace the motor unit with the anti-scald drinking lid for direct use.

Note: When the appliance starts blending, shake the cup body from side to side for better blending performance.

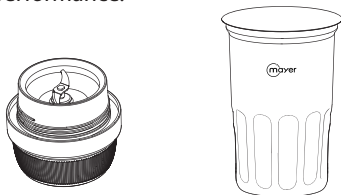


Note:

- 1. The appliance will stop automatically after 40 seconds of operation. To blend more finely, double-click the ON/OFF button to continue the process.
- 2. To stop the operation, click the ON/OFF button to halt the operation.
- 3. If the appliance gets blocked or stuck during use, ensure that the blade is not blocked by the ingredients and restart the appliance again.
- 4. Before operating the appliance, make sure the juicer cup is tightly secured to the motor unit.
- 5. It is strictly prohibited to grind dry ingredients, process hard Chinese medicinal ingredients, or blend gaseous liquids such as carbonated drinks, sodas etc.
- 6. Please refer to the table below for the light indicators of the conditions of the appliance's Conditions:

Condition	Light Indicator
Juicer cup not tightened properly	Red light flashes five times; appliance will not start
Juicer cup tightened properly	Green light flashes five times
Juicer cup untightened	Red light flashes five times
Blockage or low power	Red light flashes twice; appliance will not start
Normal operation	Green light illuminates
Low-power operation	Red breathing light displayed



Appliance Charging

Connect the end of the USB-C charging cable to a DC5V /1 A USB standard plug and insert the other end into the host charging port to start charging the device. While charging, the red breathing light will flash, and once charging is complete, the green light will remain illuminated. The product cannot be operated during the charging process.

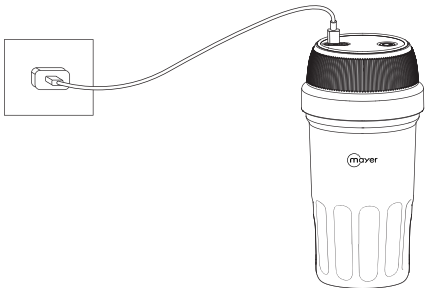

CLEANING AND MAINTENANCE

1. It is highly recommended to clean the appliance immediately after use.
2. Always switch OFF and unplug the appliance when it is not in use, before attaching or removing parts, and before cleaning. Allow the appliance to cool down first before handling.
3. Clean the exterior of the motor unit with a damp cloth only. The motor cannot be immersed in water or any liquid, nor can it be washed or cleaned with wet cloth or placed in a disinfection cabinet. The cutting blades can be washed directly under running water.

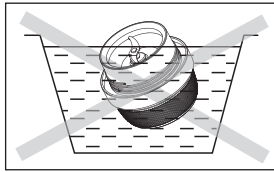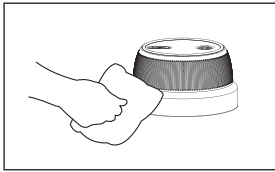

4. Do not use gasoline, abrasive chemical, or other cleaning agents for cleaning.
5. Be careful when handling the sharp cutting blades during cleaning.
6. Wash the juicer cup with soapy water and rinse it with clean water.
7. Fill the water into the juicer cup and run the appliance for 5-10 seconds for a more effective cleaning.
8. If the parts are stained by fruits and vegetable juice, add a few drops of cooking oil to wipe it off before washing to better remove the stain.
9. Ensure that all components are thoroughly dried after washing.
10. If the appliance is not used for a long time, store it in a dry and ventilated place and charge it every three months to prevent battery damage.
11. This appliance contains lithium battery. For disposal, please discard the product and package to the relevant local department or recycling centre according to local laws and regulations.

TROUBLESHOOTING

Fault	Problems	Solution
Product not working	Juicer cup and motor unit are not installed properly	Tighten the motor unit and juicer cup to the opposite position
Blade blocked	The blade is blocked by food at the moment of startup	Shake the juicer cup vigorously to remove the ingredients stuck on the blade
	Too many ingredients in the juicer cup	Reduce the amount of processed food
	The ingredients stick to the blades	Remove the frame and remove any food stuck to the blades
Product emit abnormal odor, hot, smoking, etc	Too many ingredients in the juicer cup	Reduce the amount of processed food
	The machine keeps working for too long	Follow recommended machine working time
	Product processed superheated ingredients	Stop operation and cool the ingredients. The temperature of the ingredients should not exceed 60°C
The holder or lid is leaking	Lid and juicer cup not tightly screwed	Screw the lid tightly onto the juicer cup
The juicer cup stopped working suddenly	Insufficient amounts of drinking water or other beverages to discomfort	Add adequate amounts of drinking water or other beverages
	Low machine power	Recharge appliance
	Machine idling	Add ingredients and appropriate drinking water



Disposal

The product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicates such disposal procedures. The materials recyclable in accordance with their respective symbol. By means of re-use, material recycling or any other form of recycling old appliances, you are making an important contribution to the protection of our environment.



Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at www.mayer.sg

MAYER MARKETING PTE LTD

Customer Service Hotline: 6542-8383 (Mon - Fri 9:00am to 5:00 pm)

Service Centre Operating Hours:

Mon - Fri: 9:00am to 5:00pm

Sat: 9:00am to 12:00pm

Closed on Sunday & Public Holidays

71 Ubi Crescent, #06-02, Excalibur Centre, Singapore 408571.

For more information on warranty policy, please visit:

<https://mayer.sg/pages/warranty-return-and-exchange-policy>