


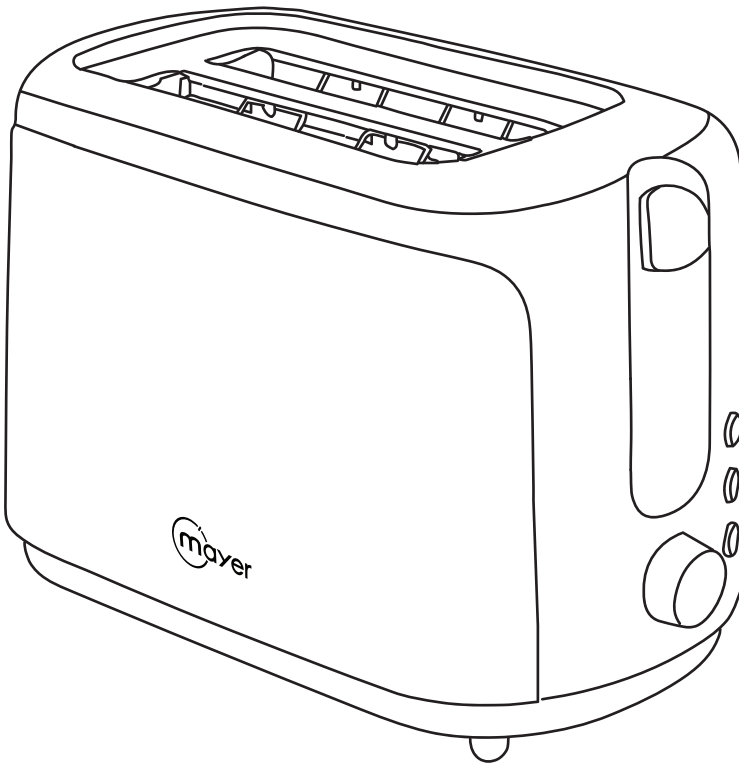

2-Slice Pop-Up Toaster

MMPT206



BREAD TOASTER

Please read this instruction manual thoroughly before operating and keep it for future reference

IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety.
- Children should be supervised at all times while in use.
- Do not use the appliance if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped or damaged in any way. If the power cord is damaged, it should be replaced by the Service Centre to avoid any hazards.
- Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse the appliance, power cord, or power plug in water or any other liquid.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Never unplug the appliance by pulling on the cord.
- Only use accessories that come with the appliance, as other accessories may cause fire, electric shock, or injury.
- The appliance surface is subject to residual heat after use.
- Do not touch the surface and any hot parts of the appliance during use or immediately after use.
- Oversized food, metal foil packages or utensils must not be inserted in the appliance as there may cause fire or electric shock.
- Do not place any papers, plastics, or other flammable items into the appliance to avoid fire hazards.
- Do not switch on the appliance near flammable materials (blinds, curtains, etc.) or close to an external heat source (gas stove, hot plate, etc.).


Warning:

- If toast of small bread slices less than 85mm length, to avoid scalding need to pay attention when taking out the slices.

PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	NO. OF SLICES
MMPT206	220V-240V, 50Hz-60Hz	700W	2 Slices

INTRODUCTION OF PARTS

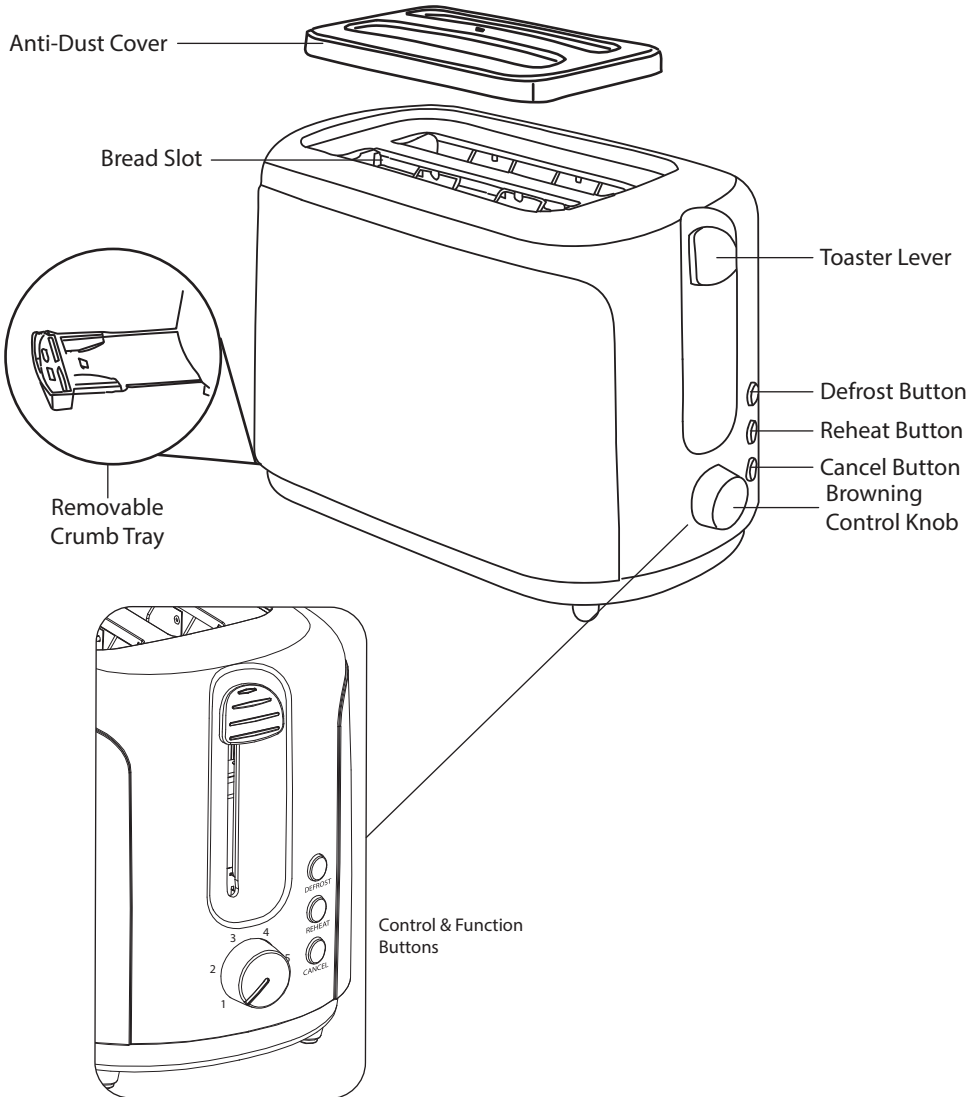

CONTROLS AND OPERATIONS

Before first use

- Remove all protective wrapping prior to using the appliance
- There is residue of oil remaining in the appliance or the heating element from manufacturing, which will emit a certain odor especially during the first use. This is normal and will disappear after using the appliance over time.
- It is recommended to heat up the appliance without any bread inside before using. Set the appliance at the highest browning level for 3 times.
- Before heating up the appliance, ensure that the anti-dust cover is removed.
- Ensure the appliances is thoroughly cooled down before using it again for toasting bread.
- Make sure that the crumb tray is properly positioned in place before using the appliance.

Operating the appliance

1. Connect the appliance to the power supply.
2. Insert 2 slices of bread into the bread slots then turn the browning control knob to set your desired browning colour.
3. There are 7 browning levels that can be selected, from 1 being the lightest toast to 7 being the darkest toast. For an ideal golden-brown toast color, it is recommended to toast bread slices at level 4.
4. Press the toaster lever downwards until it is positioned in place. The indicator light of the Cancel button will be lighted up, and toasting begins.
5. The toasting process may be interrupted or stopped by pressing the Cancel button at any time.
6. Once the toasting is done, the toaster lever will automatically spring up, and the bread can be taken out from the bread slot.

Note:

- It is normal for toasting colour to be slightly different on both sides.
- If toasted continuously, toasting colour for the latter bread is darker than the colour of previous cycle at the same browning level.

Defrost function

This function can be used for bread that has been taken out from the refrigerator or freezer.

1. Place the frozen slice bread into the bread slot.
2. Turn the browning control knob to the desired browning color level.
3. Press the toaster lever downwards and the indicator of Cancel button will be lighted up.
4. Press the Defrost button and the indicator light will be illuminated.
5. When the toasting is completed, the toaster lever will automatically spring up.

Reheat function

This function can be used to reheat cold toasted bread.

1. Place the slice of bread into the bread slot.
2. Press the toaster lever downwards and the indicator of the Cancel button will be lighted up.
3. Press the Reheat button and the indicator light will be illuminated.

Note: For this function, the toasting duration is fixed and the browning color level cannot be set.

4. When the heating up is completed, the toaster lever will automatically spring up.

Cancel function

During the toasting process, you may observe the toasting color. The toasting can be stopped earlier if the desired browning color is achieved before the time is up. Press the Cancel Button at any point of time to interrupt or stop the toasting. The toaster lever will spring up and stop toasting.

Tips for toasting

- The bread type, moist content, freshness, thickness and quantity will affect the browning outcome.
- To toast 2 slices of bread side by side and get similar results, they should be of the same bread type, moist content and freshness.
- This appliance can be used for any bread with no toppings.
- The thickness of each bread slice should not be more than 1.5 cm.
- Darker types of bread generally need to be toasted at a higher level of browning.
- Always store bread slices for toasting in a dry location.
- Keep the bread slices in a sealed wrapper to maintain freshness.
- For very thin bread slices, they will not be automatically centered when placed. Therefore, they should be toasted at the lowest level of browning to avoid being burnt on one side.

Note:

- If smoke comes out from the appliance, press the Cancel button to stop toasting immediately.
- Avoid toasting food with extremely runny ingredients such as butter.
- Never attempt to remove bread jammed in the slots without unplugging the appliance from the power supply.
- Avoid damaging the internal components or heating elements when removing the bread.
- Due to heat expansion and contraction of the appliance, the anti-dust cover will not fit in place after using.
- Let the appliance thoroughly cool down before closing the anti-dust cover.

CLEANING AND MAINTENANCE

- Before cleaning, turn off the power supply and remove the plug from the power outlet.
- Let the appliance thoroughly cool down.
- This appliance cannot be washed or immerse in water. It can only be wiped with a soft and damp gentle cloth.
- Only the Removable crumb tray and the anti-dust cover can be washed in soapy water.
- To clean away any dirt on the exterior surface, do not immerse the appliance into water.
- Only wipe it with a soft and damp gentle cloth.
- Do not use any metal scouring pads or abrasive cleaning material as it may damage the appliance.
- All accessories should be washed in hot soapy water or wiped with a soft damp sponge and dry it with a soft cloth.
- Take off the crumb tray which is below of the appliance and clean it after every use.
- Make sure all the parts are clean and dry thoroughly before storage.