


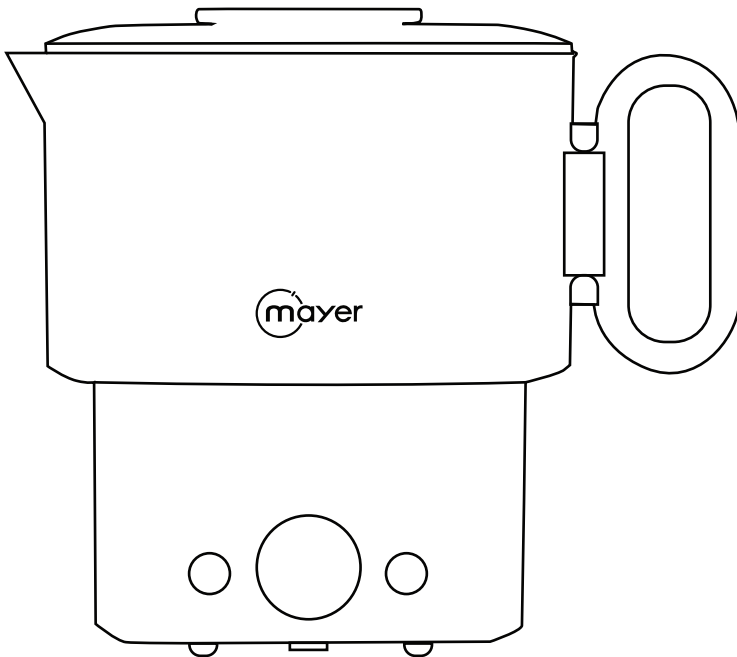

Electric Cooker

MMTC100D



ELECTRIC COOKER

Please read this instruction manual thoroughly before operating and keep it for future reference

Product design, features and specifications are correct at time of printing but are subject to change without prior notice.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Failure to follow these instructions may result in fire, electric shock, burns, or other serious injury. Read all instructions carefully before using the appliance and retain this manual for future reference.

GENERAL SAFETY

- This appliance is intended for household and similar applications only. It is not designed for commercial, industrial, or laboratory use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children shall be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children.
- To prevent overturning or accidental burns, ensure the appliance is placed on a flat, stable, dry, and heat-resistant surface during operation.
- Do not operate the appliance if it has been dropped, damaged, or shows signs of malfunction.
- If the appliance or power cord is damaged, it must be replaced or repaired by the manufacturer, its service agent, or similarly qualified persons to avoid hazard.
- This appliance is intended for use at altitudes below 2000 metres above sea level.
- Before connecting to the power supply, ensure that the voltage indicated on the rating label corresponds to the local mains voltage.

ELECTRICAL SAFETY

- Use only the detachable power cord supplied with this appliance.
- The appliance must be connected to a properly earthed (grounded) socket outlet.
- Do not operate high-wattage appliances on the same electrical circuit to prevent overloading.
- Do not modify the plug or use incompatible outlets. Where necessary, use a certified travel adaptor.
- Always unplug the appliance when not in use and before cleaning.
- Do not bend, twist, pull, knot, or place heavy objects on the power cord.
- Do not allow the cord to hang over the edge of a table or come into contact with hot surfaces.
- Do not unplug by pulling on the cord. Always grip the plug firmly.
- Do not insert or remove the plug with wet hands.
- Keep the plug and socket free from dust, moisture, or grease to prevent overheating or fire.


- Do not immerse the appliance, heating base, power cord, or plug in water or any other liquid.
- Prevent water from entering the bottom electrical components.
- Do not operate the appliance in sinks, on wet surfaces, or in damp environments.
- Do not place the appliance near heat sources such as gas stoves, ovens, or other heating appliances.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system.
- In the event of malfunction, switch off and unplug immediately. Allow the appliance to cool completely before handling.

OPERATION SAFETY

- Never leave the appliance unattended during operation.
- Ensure sufficient water or food contents are placed inside the pot before switching on.
- Do not operate the appliance empty (dry heating). Repeated dry heating may damage the heating plate and reduce product lifespan.
- The water level must always be maintained between the MIN and MAX markings indicated inside the pot.
- When using the steamer rack, the water level may be slightly below the MIN marking and ensure water does not exceed the bottom of the rack unless otherwise specified in the cooking instructions.
- Overfilling may cause boiling liquid to spill, resulting in burns or damage.
- This appliance is designed for boiling water and cooking food. When cooking, monitor the contents periodically to prevent overflow or scorching.
- Do not use the appliance to heat milk or viscous liquids.
- Steam is released during operation. Do not cover or obstruct the steam outlet.
- Do not touch the steam vent, lid interior, or hot surfaces during or immediately after use.
- Open the lid carefully and away from the face to avoid steam burns.
- The lid, housing, and body may become hot during operation. Use only the handle or designated gripping areas.
- Do not move, tilt, or shake the appliance while it contains hot liquid.
- Do not insert sharp objects or foreign materials into the appliance.
- Do not place additional containers inside the pot for heating. Only use the steamer rack supplied with this appliance.

PRECAUTIONS FOR USING A TRAVEL ADAPTER

- This product supports an input voltage range of 100V–240V AC. When travelling, ensure the travel adaptor used is rated for 100–240V and a minimum current rating of 10A to prevent overheating, malfunction, or unstable operation.
- In regions with lower supply voltage (100–120V), such as Japan, Taiwan, the United States, and Canada, only use a standalone travel adaptor rated at 10A or above.
- Multifunction travel adaptors with built-in USB charging ports may have lower current ratings and may not be suitable for use with this appliance.
- Always ensure the travel adaptor is securely connected before operation.

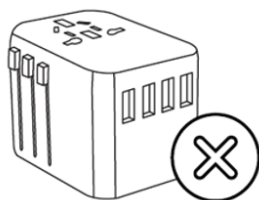


PRODUCT TECHNICAL PARAMETERS


MODEL	RATED VOLTAGE	RATED POWER	GROSS CAPACITY	COOKING CAPACITY
MMTC100D	100V-240V, 50Hz-60Hz	780W	1.6L	1L

*Specifications are subject to change without prior notice.

INTRODUCTION OF PARTS

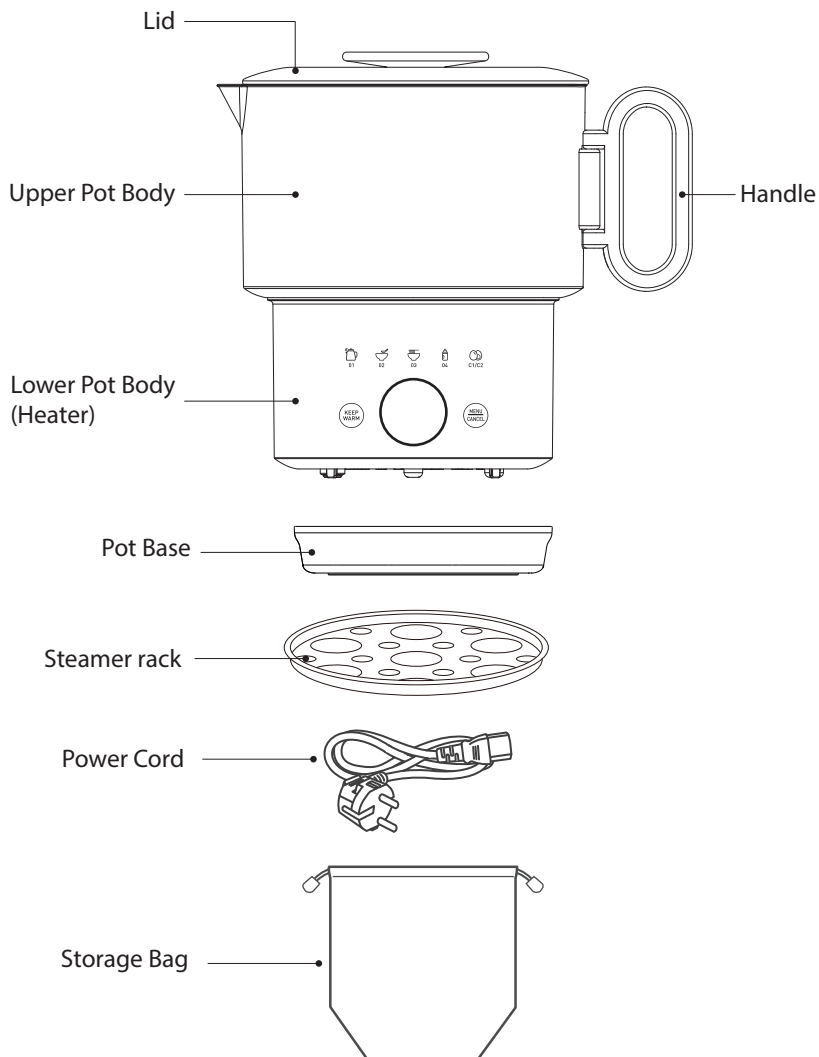

Control Panel

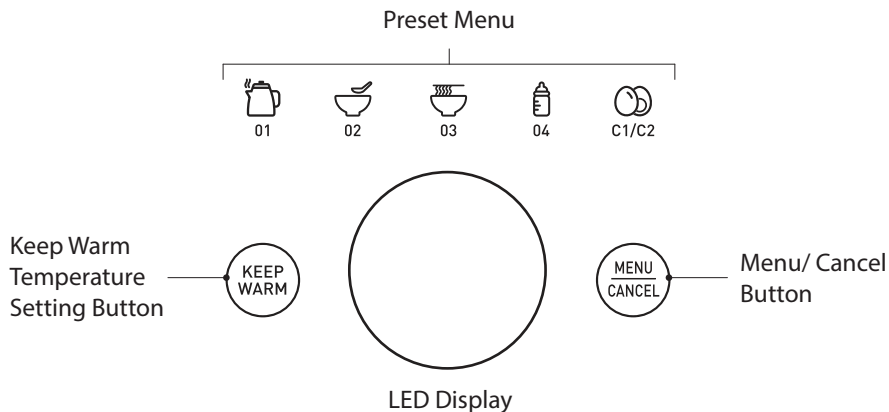


*Pictures are for illustration purpose only.

CONTROLS AND OPERATIONS

Before using the appliance

Assembly

1. Remove the appliance from the packaging. The appliance is packed in storage mode.
2. Open the lid and remove the lower pot body (heater) stored inside the upper pot body.
3. Rotate the pot base clockwise and separate it from the upper pot body.
4. Align the upper pot body and lower pot body (heater), then rotate anticlockwise until securely tightened.
5. Insert the detachable power cord into the lower pot body (heater), then plug into a suitable power socket.

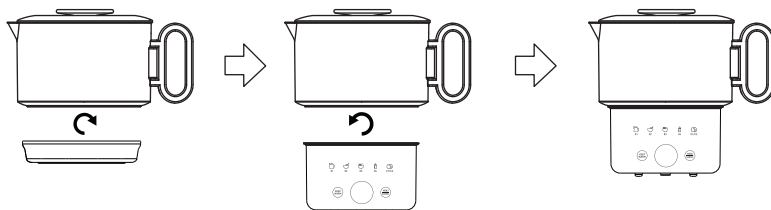


Note:

- Ensure the upper pot body and lower pot body (heater) are properly tightened and securely assembled before operation.
- This product supports an input voltage range of 100–240V AC and automatically adjusts to the local voltage. No manual voltage switching is required.

Disassembly & Storage

1. Switch off the appliance and unplug the power cord from the power socket.
2. Allow the appliance to cool completely. Ensure there is no liquid remaining inside before disassembly. Please refer to the section “Cleaning and Maintenance” for cleaning tips.
3. Remove the detachable power cord from the lower pot body (heater).
4. Rotate the lower pot body (heater) clockwise to loosen and separate it from the upper pot body.
5. Ensure the inner pot and heating plate are completely dry before placing the lower pot body (heater) inside the upper pot body for compact storage. This prevents moisture from entering the electrical components.
6. Close the lid and keep the appliance in a clean, cool, and dry place.

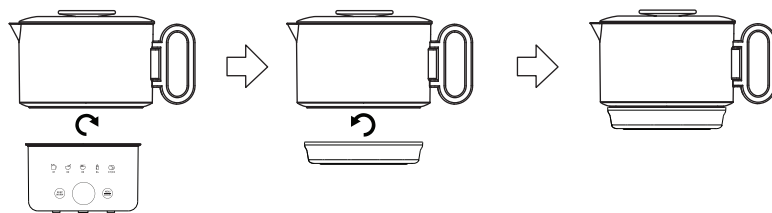

Note: Always ensure the appliance is switched off, unplugged, and completely cooled down before storing. All parts must be thoroughly clean and dry; do not store the appliance while it is still hot, wet, or damp.

Before first use:

1. Before first use, fill the pot with clean water to the MAX indicator line and boil.
2. Close the lid and place the appliance on a flat surface.
3. Connect to 100V-240V Ac power supply. Please refer to the section “Operating the appliance” for the operation.
4. Discard the water after boiling.
5. Rinse with cold water and repeat one to two times to remove any dust that may be generated during production and storage.

Note:

- Always unplug before adding or filling with water.
- Water volume between MIN (500ML) and MAX (1000ML), you can add water by opening the lid.
- Never exceed the MAX indicator line to prevent overflow or splashing.
- Never go below the MIN indicator line to prevent the pot from dry boiling.

Operating the appliance

Menu Setting

1. Once the appliance is connected to the power supply, it will enter Standby Mode automatically. The LED display will show "--".
2. In Standby Mode, touch the MENU button to select the desired cooking menu according to the food being prepared. The LED display will indicate the selected menu.
3. Each press of the MENU/CANCEL button cycles through the menus in the following sequence: 01→02→03→04→C1→C2→-- (Standby Mode). The menu selection will repeat in a continuous loop.
4. To cancel the setting, press and hold the CANCEL button.

Note:

- The water level must always be maintained between the MIN and MAX markings indicated inside the pot.
- When using the steamer rack, the water level may be slightly below the MIN marking and ensure water does not exceed the bottom of the rack unless otherwise specified in the cooking instructions.
- The appliance is equipped with Boil-Dry Protection. This safety feature activates automatically when there is no water or insufficient water inside the pot, and the power will be cut off automatically. Allow the appliance to cool down for approximately 10 minutes before using it again.

Menu	Description
--	• The appliance is connected to the power supply and remains in standby status. • Press the MENU button to select the desired cooking mode.
01	Water Boiling Mode (Suitable for boiling water): • The appliance is connected to the power supply and remains in standby status. • Press the MENU button to select the desired cooking mode. Note: • The water level must be maintained between the MIN and MAX markings indicated inside the pot.
02	Slow Cook Mode (Suitable for soup/ hot pot): • Heats contents to 100°C, then automatically reduces to 90°C. • Maintains at 90°C for 60 minutes. • After completion, the appliance emits 3 beeps and returns to Standby Mode. Note: • The water level must be maintained between the MIN and MAX markings indicated inside the pot.

Menu	Description
03	High Power Cooking Mode (Suitable for noodles): • Heats contents to 100°C, then switches to a gentle, low power cook (300W). • Operates for 20 minutes. • After completion, the appliance emits 3 beeps and returns to Standby Mode. Note: • The water level must be maintained between the MIN and MAX markings indicated inside the pot.
04	Long-time Keep Warm Mode (Suitable for warm water preparation): • Heats water to 100°C, then automatically switches to 40°C Keep Warm Mode. • Maintains at 40°C up to 24 hours. • After completion, the appliance emits 3 beeps and returns to Standby Mode. • The display alternates between "04" and the current temperature. Note: • The Keep Warm indicator light remains off during operation. • The Keep Warm function cannot be selected simultaneously. • The water level must be maintained between the MIN and MAX markings indicated inside the pot.
C1	Egg Cooking Mode 1 (Suitable for soft-boiled eggs) • Use the supplied steamer rack to cook eggs. • Heats water to 100°C and continues heating for 3 minutes. • After completion, the appliance emits 3 beeps and returns to Standby Mode. Note: • Remove the eggs immediately after cooking is completed.
C2	Egg Cooking Mode 2 (Suitable for hard-boiled eggs) • Use the supplied steamer rack to cook eggs. • Heats water to 100°C and continues heating for 11 minutes 30 seconds. • After completion, the appliance emits 3 beeps and returns to Standby Mode.

Keep Warm Function

There are two methods to use the keep warm function:

a. Heat Water to the Desired Temperature (Without Boiling)

1. In Standby Mode, press the KEEP WARM button to select the desired temperature setting.
2. The appliance will heat the water directly to the selected temperature and maintain it automatically.

b. Boil/ Cook First, Then Keep Warm at the Desired Temperature.

1. Touch the MENU/CANCEL button to select the desired cooking menu. This function is available for Menu 01/ 02/ 03/ C1/ C2 only.
2. Immediately press the KEEP WARM button after selecting the menu to choose the desired Keep Warm temperature.
3. The appliance will first heat the contents to 100°C, then automatically switch to the selected Keep Warm temperature.

Keep Warm Temperature Selection

- Press the KEEP WARM button to cycle through the following temperature settings:
40°C → 45°C → 50°C → 55°C → 60°C → 70°C → 80°C → -- (Standby Mode).
- The temperature selection repeats in a continuous loop.

Keep Warm Operation

- The Keep Warm indicator light remains on during operation.
- The Keep Warm function operates for up to 2 hours.
- After 2 hours, the appliance will stop automatically, emit 3 beeps, and return to Standby Mode.
- When the water temperature is lower than the selected temperature, the display shows the set temperature.
- When the water temperature is higher than the selected temperature, the display shows the actual water temperature.
- To exit the Keep Warm function, press the MENU/CANCEL button until the appliance returns to Standby Mode.

Note: The appliance is equipped with Boil-Dry Protection. This safety feature activates automatically when there is no water or insufficient water inside the pot, and the power will be cut off automatically. Allow the appliance to cool down for approximately 10 minutes before using it again.

CLEANING AND MAINTENANCE

- Regular cleaning and proper use will help prolong the service life of the appliance.
- Always switch off and unplug the appliance from the power supply before cleaning.
- Allow the appliance to cool completely before cleaning, disassembly, or storage.
- Remove the detachable power cord from the appliance before cleaning.
- Never immerse the lower pot body (heater), power cord, or plug in water or any other liquid, as this may result in electric shock or fire.
- During operation, the appliance body becomes hot. Do not touch hot surfaces directly.
- Keep the lid closed when pouring out hot water to avoid burns or splashing.
- If the appliance has not been used for an extended period, boil fresh water up to the MAX marking 2–3 times and discard the water before reuse.
- Do not place the lower pot body (heater) in a dishwasher or dish dryer.
- Do not use wire brushes, steel wool, or abrasive materials for cleaning.
- Do not use acidic, corrosive, or abrasive cleaning agents.
- Clean the exterior surface with a soft cloth slightly dampened with water, then wipe dry with a clean cloth.
- To prolong the lifespan of the appliance, regular descaling is recommended.

General Cleaning

1. After each use, clean any remaining food residue promptly.
2. Add a small amount of mild detergent and warm water into the pot.
3. Use a soft sponge or cloth to gently clean the inner surface.
4. Rinse thoroughly with clean water.
5. Drain all water completely and wipe dry with a clean, soft cloth.

Descaling

Regular descaling helps maintain heating performance and prolongs the service life of the appliance.

The frequency of descaling depends on water hardness and frequency of use. When using tap water regularly, descaling is recommended after approximately every 8–10 boiling cycles.

1. Mix water and white vinegar or a commercially available descaling agent in a ratio of 2:1.
2. Pour the solution into the pot.
3. Select Menu 01 and heat the solution until boiling.
4. Allow the solution to remain inside the pot for approximately 30 minutes.
5. Pour away the solution and rinse thoroughly with clean water.
6. Boil fresh water 4–5 times to remove any remaining residue. Discard the water after each cycle.
7. Repeat the process if heavy scale deposits remain.

Note:

- A suitable descaling agent, such as a citric acid descaling solution, may also be used.
- Do not immerse the appliance in water.
- The exterior surface may be wiped with a damp cloth and polished with a soft dry cloth.

TROUBLESHOOTING

Problem	Cause of Issue	Solution
The appliance does not work.	The power plug is not connected properly	Check that the power plug is securely connected to the power socket.
	The power cord is damaged.	Stop using the appliance and contact the authorised Service Centre for inspection or repair.
	Boil-dry protection has been activated due to insufficient or no water inside the pot.	Unplug the appliance and allow it to cool down completely before refilling with water and operating again.
White scale appears inside the pot or the water becomes cloudy.	Mineral deposits caused by hard water.	Descalc the appliance regularly according to the cleaning instructions in this manual.
The appliance stops operating during heating.	Overheat protection, the overtemperature protection function is enabled	Switch off and unplug the appliance. Allow it to cool completely, ensure sufficient water or contents are inside the pot, then restart the appliance.
Error code - display "E1".	Temperature sensor open circuit.	Please contact the Service Centre for repair.
Error code - display "E2".	Temperature sensor open circuit.	
Error code - display "E3".	Boil-dry protection has been activated due to insufficient or no water inside the pot.	Switch off and unplug the appliance. Allow it to cool completely, ensure sufficient water or contents are inside the pot, then restart the appliance. If the issue persists, contact the Service Centre.

Note:

- A suitable descaling agent, such as a citric acid descaling solution, may also be used.
- Do not immerse the appliance in water.
- The exterior surface may be wiped with a damp cloth and polished with a soft dry cloth.



Disposal

The product must not be disposed of via normal household waste after its service life, but must be taken to a collection station for recycling of electrical and electronic devices. The symbol on the product, the operating instructions or the packaging indicates such disposal procedures. The materials recyclable in accordance with their respective symbol. By means of re-use, material recycling or any other form of recycling old appliances, you are making an important contribution to the protection of our environment.



Keep the original packaging in a safe place so that you may use it in the event that transportation or shipping of the product becomes necessary.

Warranty & Customer Service

SCAN FOR



e-Warranty

e-Warranty Registration at www.mayer.sg

MAYER MARKETING PTE LTD

Customer Service Hotline: 6542-8383 (Mon - Fri 9:00am to 5:00 pm)

Service Centre Operating Hours:

Mon - Fri: 9:00am to 5:00pm

Sat: 9:00am to 12:00pm

Closed on Sunday & Public Holidays

71 Ubi Crescent, #06-02, Excalibur Centre, Singapore 408571.

For more information on warranty policy, please visit:

<https://mayer.sg/pages/warranty-return-and-exchange-policy>