 


mistral

Air Cooler MAC1000R

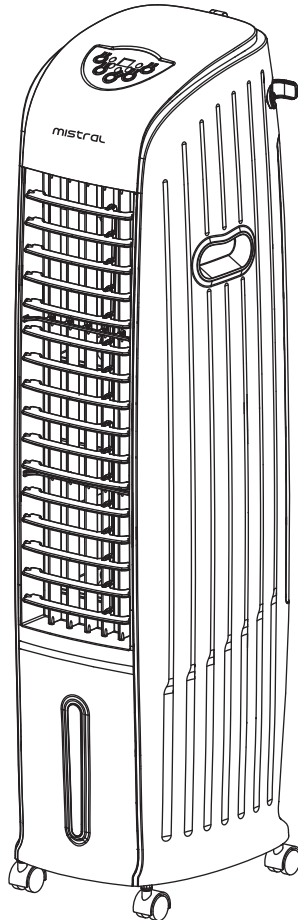

AIR COOLER

Please read this instruction manual thoroughly before operating and keep it for future reference

IMPORTANT SAFETY INSTRUCTIONS

Warning

- This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge unless they have been given supervision or instruction by a person responsible for their safety.
- Children should be supervised at all times while in use.
- Do not use the appliance if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped or damaged in any way. If the power cord is damaged, it should be replaced by the Service Centre to avoid any hazards.
- Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse the appliance, power cord, or power plug in water or any other liquid.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Never unplug the appliance by pulling on the cord.
- Only use accessories that come with the appliance, as other accessories may cause fire, electric shock, or injury.

Air Cooler Safety Instructions


- This appliance is only for household and indoor use only.
- Unplug from outlet while filling water, before cleaning, maintaining, moving or not in use.
- Do not insert foreign objects into the grid of air vent (intake or outlet) during operation.
- Do not cover the appliance with paper, cardboard, plastic, metal foil, or any other flammable material. Otherwise, a fire may occur.
- Keep the appliance away from any hot sources.
- Place the unit on a solid hot-proof horizontal surface. Never turn the unit on its sides.
- Water level must be between the MIN and MAX line.
- After filling with water, do not tilt the unit and avoid moving it, which may cause water to overflow the sides of the tank and leak.
- Do not place any objects on the top of the unit.
- The air vent must not be obstructed during operation.
- Do not use petrol, toluol, etc to clean the unit body. For slight dirt on the body, wipe it off with a soft damp cloth. For greasy dirt, squeeze a little toothpaste or mild detergent on a soft damp cloth, and then wipe the dirt off.
- Keep the air vent (intake or outlet) away from obstacles.
- Do not strike or shake the unit body during operation, otherwise, it will stop working automatically. In this case, restart the unit.
- After some time operation, dust and dirt may occur in water tank. It is recommended to change water and clean water tank frequently.
- Do not put the unit under wall socket.

- Empty water tank to avoid odor occurring when not in use.
- Do not use after the unit malfunctions. Send to service center for repair.
- Do not use the unit for other than its intended use.
- Close supervision should be exercised when children are nearby.
- Keep cord away from sharp or hot objects.
- Do not clean with metal scouring pads. It may scratch the surface or cause electrical shock.
- Do not clean the unit with flammable liquid.
- Avoid sharing a power outlet with any other appliances.
- Do not use new and old batteries at the same time in remote controller.
- Take off batteries from remote controller when not in use.

PRODUCT TECHNICAL PARAMETERS


MODEL	RATED VOLTAGE	RATED POWER
MAC1000R	220-240V~ 50Hz	100W

INTRODUCTION OF PARTS

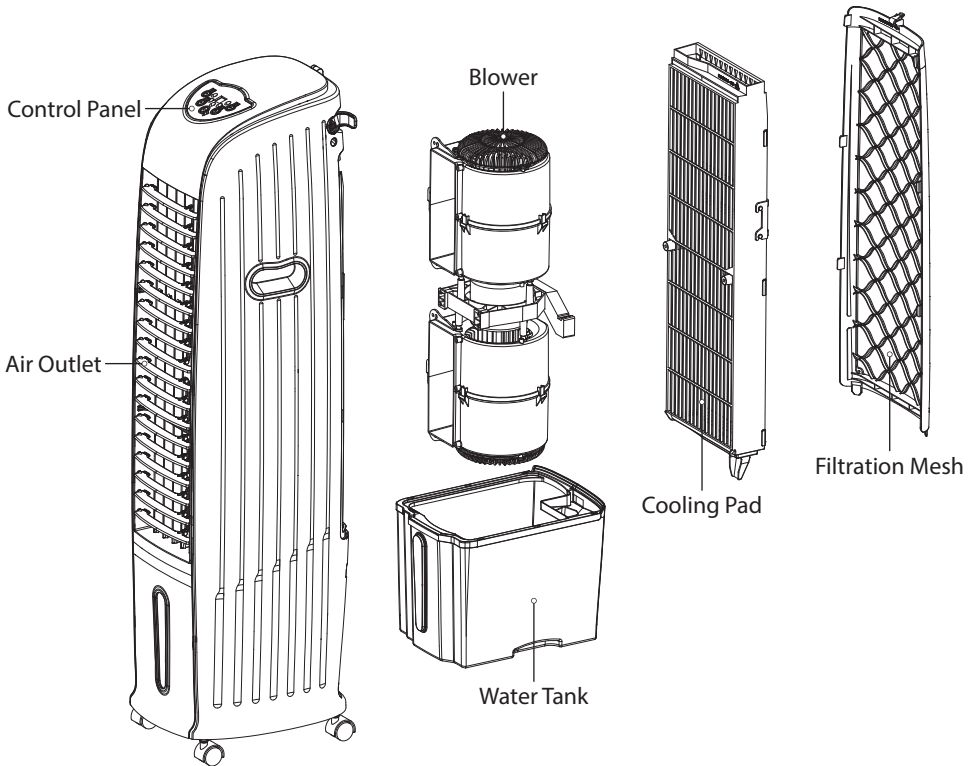

CONTROLS AND OPERATIONS

Control Panel

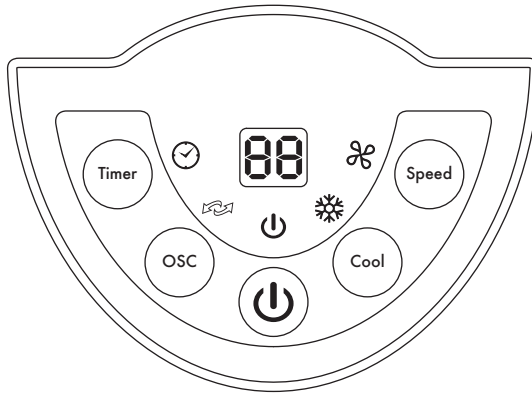

How to use

1. Pull the unit outwards from the carton and place it on a solid hot-proof horizontal surface.
2. Check if the accessories are complete, same as the accessories list.
3. Place the unit on a solid hot-proof horizontal surface. Take out the casters and caster wrench to assemble.

Note:




- Casters with skid are for the two front holes and casters without skid are for the two back holes at the bottom of the unit.(shown as fig.1).
4. Pull upwards the water tank and pull outwards about 10cm to the locking pin, then add water.(shown as fig.2)

Note:

- (I) Water level must be between the MIN and MAX line.(shown as fig.3)
 - (II) After some time operation, dust and dirt may occur in water tank. It is recommended to change water and clean water tank frequently.
5. Only use the unit with correct AC outlet. Insert the plug pin into a wall socket. A small beep sound can be heard and the power indicator will be on.

Note:

- (I)To protect against electric shock, do not remove plug from wall outlet by wet hand.
- (II) Unplug from outlet while moving the unit.
- (III) Insert the plug pin into the wall socket and make sure it is connected well.

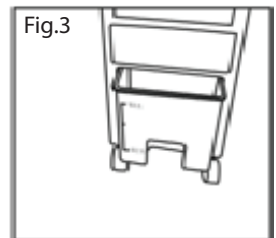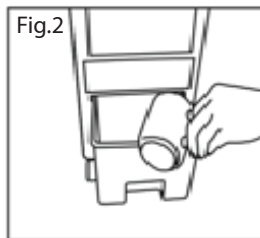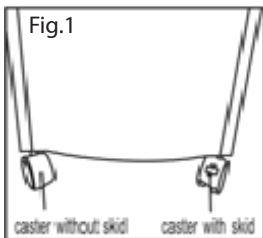

On/Off

1. Press this button once to operate the appliance. It will start at MID for 3 seconds and then
2. revert to work under the memorized status.
3. For first time use, it will start at MID for 3 seconds and then resume to LOW.
4. Press again this button to turn OFF.

Oscillation

1. Press this button once, the louvers will begin to move left to right automatically.
2. Press again this button to cancel.

Speed

1. During operation, press this button to adjust 3 speeds of air flow (Low - Mid - High).

Cool

1. Press this button once to start the evaporative cooling function (first ON second OFF) the cool wind indicator light illuminated, the pump connected to operation.
2. Press this button again to cancel.

Timer

1. It can be set between 1 to 24 hours with hourly incremental intervals.
2. Press this button again to cancel.

CLEANING AND MAINTENANCE

Note:

- After long time operation, the filtration mesh becomes clogged with dust and dirt, which will greatly affect the unit's performance. It is recommended to clean the filtration mesh frequently.

Cleaning the filtration mesh

1. Remove plug from wall outlet.
2. Catch the filtration mesh handle and pull upwards. (shown as fig.4)
3. Clean filtration mesh with mild detergent and soft brush.
4. Make sure filtration mesh is completely dry before installing.

Cleaning the water tank

1. Remove plug from wall outlet.
2. Pull out the water tank. (shown as fig.5)
3. Clean the water tank by add clean water and empty through drain hole (unplug the stopple of the drain hole).
4. Put the stopple and water tank in place after cleaning.

Cleaning the body

1. Clean the body with a little mild detergent on a soft cloth. Dry completely before next use.

Note:

- (I) Unplug from outlet before cleaning.
- (II) No water on the control panel.

