 


mistral

25L Detachable Air Cooler with Steriliser MAC2300R

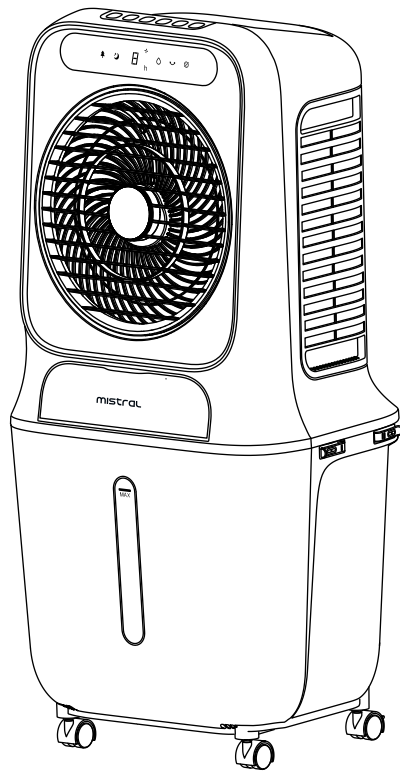

AIR COOLER

Please read this instruction manual thoroughly before operating and keep it for future reference

IMPORTANT SAFETY INSTRUCTIONS

Warning

- This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge unless they have been given supervision or instruction by a person responsible for their safety.
- Children should be supervised at all times while in use.
- Do not use the appliance if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped or damaged in any way. If the power cord is damaged, it should be replaced by the Service Centre to avoid any hazards.
- Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse the appliance, power cord, or power plug in water or any other liquid.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Never unplug the appliance by pulling on the cord.
- Only use accessories that come with the appliance, as other accessories may cause fire, electric shock, or injury.

Air Cooler Safety Instructions


- It is recommended to switch off the product, and allow the motor to rest for at least 1 hour after 15 hours of use.
- For your own safety, please clean the product regularly. Accumulation of dust/ pet dander etc. may lead to motor failure or pose a fire hazard. Ensure that the product is switched off when cleaning.
- Year 1 -2 of use: It is recommended to switch off the air-cooler fan after 15 hours of work and allow the motor to rest for at least 1 hour.
- After 2 Years of Use: It is recommended to switch off the air-cooler fan after 10 hours of work and allow the motor to rest for at 1 hour.
- Unplug the appliance during filling and cleaning.
- Do not touch the power cord plug with wet hands, there is a danger of electric shock.
- Do not fold or place heavy objects on the power cord.
Do not insert foreign objects such as wooden sticks and metal sticks into the air inlet and outlet, which will cause leakage, short circuit and the possibility of product damage.
- Do not spray pesticides and flammable sprays which may damage the product.
- Avoid blowing the product air outlet directly to children for a long time, which may cause children to get sick or affect their health.
- Abnormal handling. When the product has peculiar smell and abnormal sound during use, please stop using it immediately and unplug the power supply.

- After adding water to the machine, do not tilt or collide when placing or moving it to prevent splashing. If the product has been dumped and there is water in the machine, unplug it immediately and wait for 24 hours to dry before turning it on.
- The water level of the water tank should not exceed the maximum water level line.
- When the water tank of the product is full of water, do not grab the handle to lift the whole machine, otherwise the water in the water tank will overflow, you can only push the handle to move the product, and only when it is confirmed that there is no water or very little water in the water tank, you can grab the handle to move the product. Lift the whole machine. When humidifying, it is strictly forbidden to disassemble and assemble the air filter net and the wet curtain bracket, which will cause water droplets to spray out of the air outlet.
- When going out or not using the machine for a long time, you must turn off the machine and pull out the power cord plug from the socket.
- Do not ingest battery, Chemical Burn Hazard.
- This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death;
- Keep new and used batteries away from children.
- If the battery compartment does not close securely, stop using the product and keep it away from children.
- If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- The batteries contain materials, which are hazardous to the environment; they must be removed from the appliance before it is scrapped and that they are disposed of safely.
- Be aware that high humidity levels may encourage the growth of biological organisms in the environment.
- Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.
- Never leave water in the reservoir when the appliance is not in use.
- Empty and clean the humidifier before storage. Clean the humidifier before next use.


PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	AIR VOLUME	AREA
MAC2300R	220-240V, 50Hz	90W	25 m ³ /min	30 m ²

 
INTRODUCTION OF PARTS

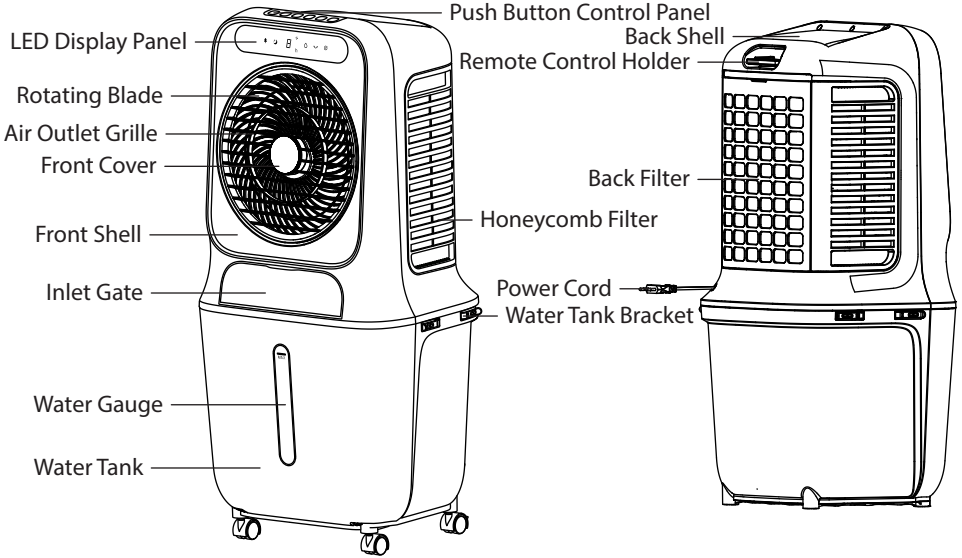


Control Panel

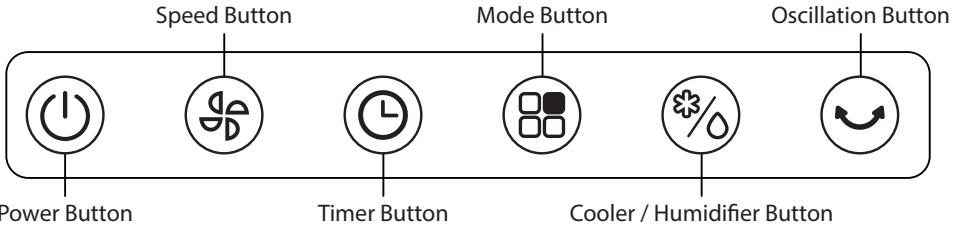 


Display Panel Indicators

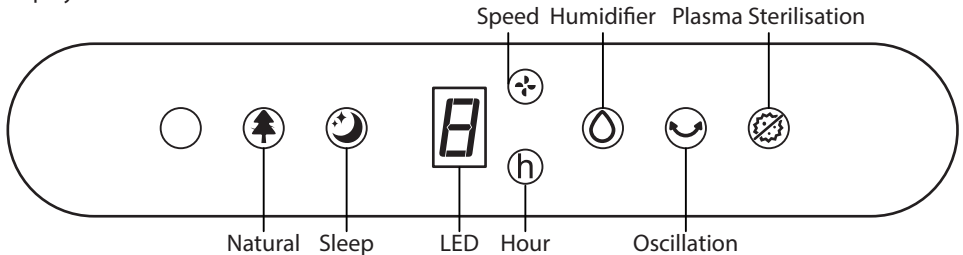 

Remote Control

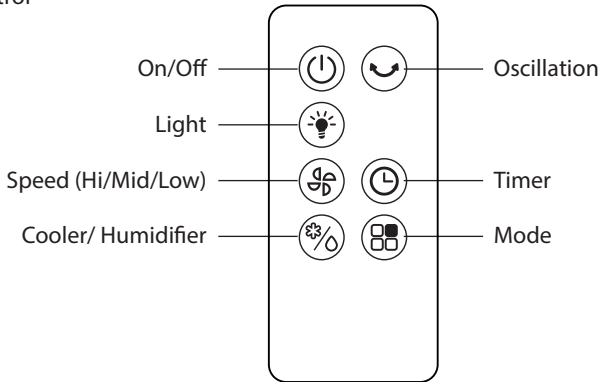 

Ice Packs

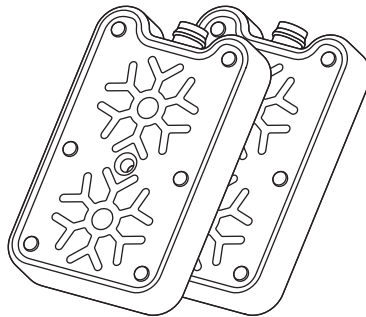 

Usage of ice packs

- Ice packs have a cold storage and heat preservation characteristics, which can absorb the heat in the water, keep the water temperature in the water tank lower than the ambient temperature for several hours, and make the wind from the air cooling fan cooler.
1. Put the ice pack into the refrigerator until it freezes completely.
 2. Put the frozen ice pack into the water tank. After about 10 minutes, the water temperature in the water tank will be lower than the ambient temperature.
 3. The appliance is equipped with two ice packs to ensure continuous use.
 4. Do not open the cover of the ice box or swallow its contents.

Product installation and usage

Usage of ice pack:

- After the product is unpacked, install the casters. According to the prompts on the water box, take out the water pump and assemble the body with the water tank. After four fixing buckles are fastened, it can be used directly.

Usage of various function buttons:

- After plugging in the power supply, it enters the standby state, and all the function indicators are off. Except for the ON/OFF, pressing other keys is invalid.

CONTROLS AND OPERATIONS

Power

- In the standby state after power-on, press the "ON/OFF" once to turn on the power. The default state of power-on is:
 - Low-speed wind operation, the wind speed indicator light is on, and the digital tube displays "1". (After powering on for the first time, start the mid-range wind for 3 seconds, then switch to the low-speed wind, and then turn it on in the standby state. If low-speed wind was used before shutting down, run the mid-range wind for 3 seconds, and then switch to the low-speed wind.)
- In the working state, pressing the "ON/OFF" will turn off all functions and the machine will enter the standby state.

The plasma

- Powers on automatically and the corresponding indicator light is on.

Other functions

- All other functions are turned off, and the corresponding indicator lights are off.

Speed

- In the power-on state, press the speed button to adjust the wind speed.
- According to: low-speed wind, mid-speed wind, high-speed wind, low-speed wind... cycle, digital tube instructions: press "1", "2", "3", "1"... to cycle in turn.


Dry air function:

- In the power-on state, press and hold the speed button for 3s to enter the dry air function, start the high-speed wind, the wind speed indicator flashes, and continue to run for 20 minutes;
- During the operation of the dry air function, except for the speed, on/off, and the " " screen-off button, other function buttons are invalid. (Long press the speed button for 3s to exit the dry air function)
- After the high-speed wind runs for 20 minutes, the machine will automatically shut down and enter the standby state.

Timer

- In the power-on state, press the timer button to set the timer shutdown function.
- The time range of timing is 1 - 9 hours, which is progressive in hours and displayed by digital tube. ("0" means no timing).
- In the power-on state, press this key, the time indicator lights up, and the digital tube flashes to display the timed time, indicating that it is in the state of timed time setting.

- At this time, you can press the timed button to set the timed time, press any key (except the on/off button) or wait 5 seconds to exit settings.
- After the timing is completed, the digital tube displays the timing time and the current wind speed alternately at 5-second intervals, and the wind speed indicator and the time indicator display accordingly.
- When the internal timing program expires, the appliance will enter a standby state.

Mode 

 
- When it is turned on for the first time, it is running with normal wind. Press the mode wind button to switch the mode wind.
- The switching sequence is normal wind, natural wind, sleep wind normal wind..., and the corresponding indicator lights show its function.

Normal wind:

- The product operates according to the wind speed gear set by the user, divided into three wind speed gears: high, medium and low, and runs at a fixed speed

Natural wind:

- The product operates according to the wind speed gear set by the user, according to the rules preset by the program, and the operation mode is automatically switched from high-medium-low gear.
- This mode imitates the blowing effect of nature, making the blowing wind more Soft and comfortable.
- The specific programme waveform of natural wind mode is as follows:

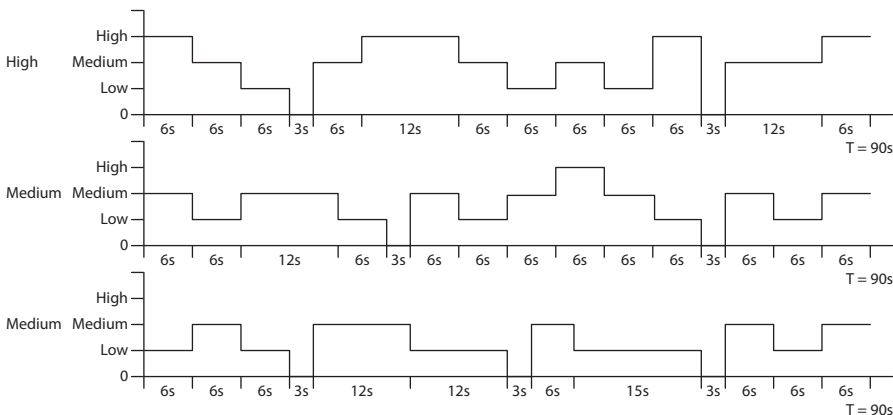

Sleeping wind:

- The product performs timed downshifting according to the wind speed gear set by the user and according to the rules preset by the program.
- This mode prevents people from falling asleep due to too much wind and causing physical discomfort.

The following is the set gear and sleep wind. Operation after opening:

- High-speed sleep wind:
 - 30 mins high-grade normal wind
 - 30 mins mid-range normal wind
 - Low-grade normal wind has been running
- Medium-speed sleep wind:
 - 30 mins
 - Mid-range normal wind, low-speed normal wind has been running
- Low-speed sleep wind:
 - Low-speed normal wind has been running
- In the sleep wind mode, the wind speed indicator of the corresponding gear changes with the switching of the normal wind mode. (For example: when the sleep wind is turned on at the mid-range wind speed, the mid-range normal wind will automatically switch to the low-grade normal wind after running for 30 minutes. At this time, the digital tube display will automatically switch from "2" to "1".)

Cooler/Humidifier

- In the power-on state, press the cooler/humidifier button to turn on or off the cooling/humidifying function:

The cooling/humidification function is turned on:

- The water pump is working, and the indicator light is on.

The cooling/humidification function is off:

- The water pump stops working and the indicator light does not light up.
- Water shortage protection function:
 - When the cooling function is turned on, after the pump works for 45 seconds, if the water tank is continuously detected to be short of water within 5 seconds, and the protection switch is disconnected (water shortage), the water pump will stop working, and the indicator light will be on for 0.5 seconds and off for 0.5 seconds.
 - The frequency of seconds keeps flashing, and the humidification function is turned off. Press the cooling/humidifying key again to turn off the indicator.

Oscillation

- In the power-on state, press the oscillation button to enable or disable the swing function. The corresponding light indicator will light up.

Light

- In the power-on working state, press the off-screen button on the remote control, the machine enters the off-screen function, and all indicators are off.
- When the machine is in the off-screen state, press the off-screen button or any button for the first time, the indicator light will return to the steady state, and the function will not be switched, and then press other buttons to execute the corresponding button function.

Other Function

- Within 1 minute after any indicator light is on, if there is no action on the button at this time, the indicator light will be dimmed (1/3 of the original brightness). At this time, the button will be activated again, and the indicator light will be bright.

Uninterruptible power memory function:

 
- If it is not turned on for the first time, press the on/off button in the standby state, and it will keep the state before shutdown after starting, except for the timer, sleep air and dry air functions.

Usage of the remote control:

- First open the battery cover on the back of the remote control, install a 3V CR2032 battery, and it can be used.

How to open the battery cover:


1. First press and hold in the direction of #1 in the figure to release the button on the battery cover, and then pull out in the direction of #2.
 2. When using, please align the position of the receiving head.
 3. When the power of the battery is exhausted, pull out the battery cover according to the direction shown in the figure, and replace with a new battery (CR2032 3V).
- When replacing the battery, please pay attention to the positive and negative poles of the battery; then the battery cover is reset and ready for use.
 - The cells shall be disposed of properly, including keeping them away from children;
 - Even used cells may cause harm.

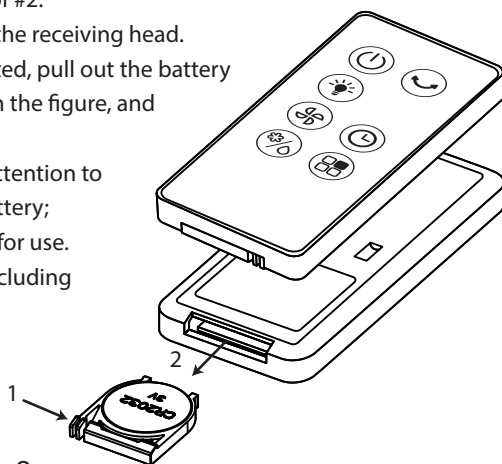

Refilling water

To turn on the refrigeration and humidification function, add water to the water tank:

 1. Before adding water, open the water inlet gate and slowly pour water into the water tank.
 - After adding the water, close the water gate again.
 - Before adding water, open the 4 water tank buckles to separate the body from the water tank, and slowly pour water into the water tank.
 - After adding water, install the body and water tank, and fix the buckle.
 - When adding water, pay attention to the water level display on the front of the water tank.
 - When adding water, please be careful not to exceed the maximum water level.
 - Be sure to use clean tap water.

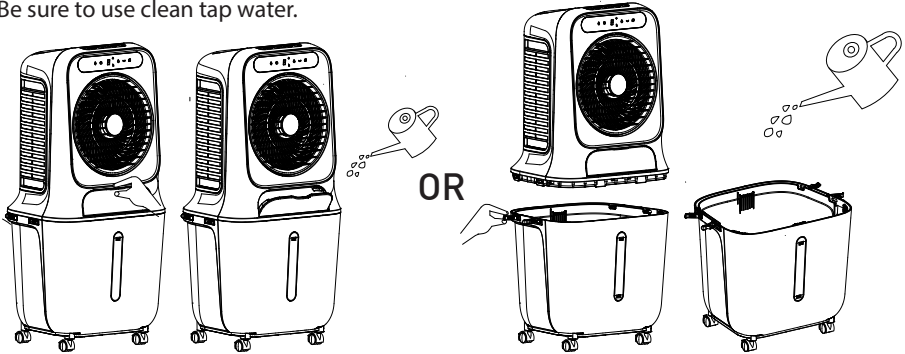


Warm reminder:

- When the machine is used for the first time, if the water in the water tank has a slight discoloration and a slight smell, it is a normal phenomenon, non-toxic and harmless, and will not affect your health.

After taking out the fuselage, please pay attention to check the bottom prompt:

 - "Please take out the pump when using and put it back after use."
- "Please clean the water tank after using."
- Rotate the water pump buckle counterclockwise, and take out the water pump and water pipe from the storage tank (the water pipe is fixed by two buckles), so that the water pump can naturally drop to the bottom of the water.

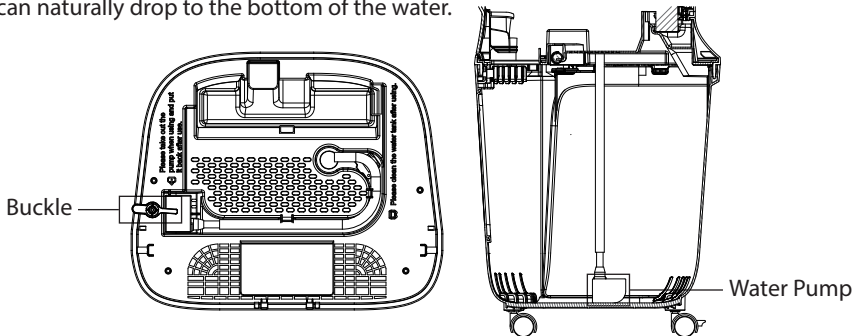


CLEANING AND MAINTENANCE

- Don't use chemicals during cleaning.
- Turn off the power and unplug the power plug.
- Be sure to unplug the power line during cleaning, otherwise it may cause electric shock.
- When the outer surface is dusty, wipe it with a soft cloth; when the surface is too dirty, it can be mixed with water below 50 degrees Celsius and a neutral detergent, then wiped with a soft cloth and dried.
- When cleaning, do not use gasoline, thinner, thinner and any substances that can easily damage the outer surface.

Water Tank cleaning

 1. Unplug the power supply, unlock the bobbin locks at the sides of the air cooler - kindly note that there are both bobbin locks on both left and right side of the air cooler, and separate the body from the water tank.
2. Keep the water pump back into the bottom of the air cooler body (storage tank) by securing it with the buckle (turn the buckle clockwise to lock it) - now the water pipe is locked by the buckle.
3. Wipe off the scale in the water tank with a towel dipped in a little detergent, then rinse with water and then pour out the sewage.
4. Use a dry clothe to wipe clean the water tank, ensure the water tank is dry for the next usage.
5. Put back the air cooler body with the water tank, and lock the bobbin locks at the sides.

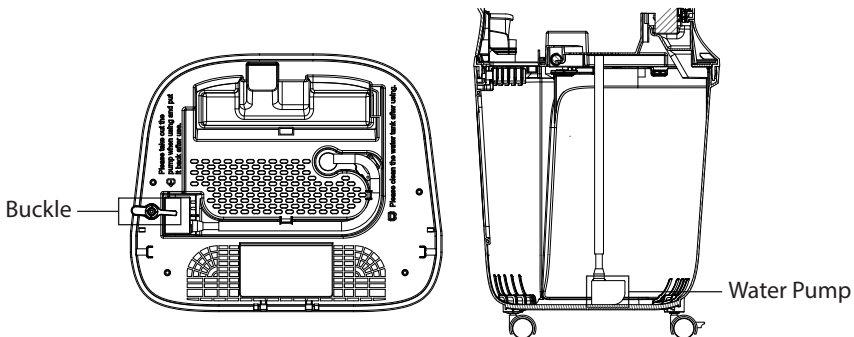

Body surface cleaning

1. To clean the surface of the body, just wipe it with a damp cloth. It is strictly forbidden to directly rinse it with water.
2. Do not use corrosive detergents or solvents for cleaning.
3. Be sure to turn off the power switch and unplug the power cord when cleaning the body, otherwise there may be electric shock.

Install and use after cleaning

1. Install the cooling pad assembly, water tank, etc. in order to ensure that the installation is correct.
2. Connect the power supply to confirm that the product is working properly.

Maintenance

1. When the product is not used for a long time, unplug the power plug, pack the product and prevent dust from entering the body.
2. Before packaging, make sure that the cooling pad, filter, etc. are dry, and there is no water in the water tank.