 


# mistral

## 40" Tower Fan with Remote MFD4000R

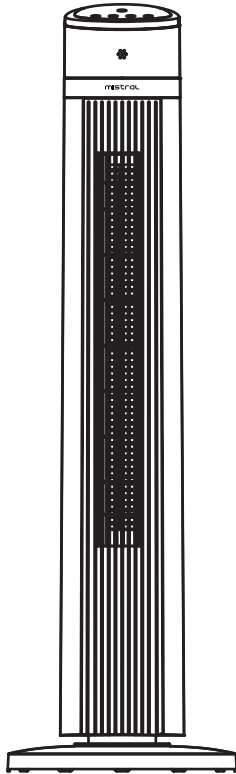

### TOWER FAN

Please read this instruction manual thoroughly before operating and keep it for future reference

# IMPORTANT SAFETY INSTRUCTIONS

## Warning

- This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge unless they have been given supervision or instruction by a person responsible for their safety. Children should be supervised at all times while in use.
  - Do not use the appliance if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped or damaged in any way. If the power cord is damaged, it should be replaced by the Service Centre to avoid any hazards.
- Always follow basic safety precautions when using electrical appliances to reduce the risk of
- fire, electric shock, and/or injury.
  - Do not immerse the appliance, power cord, or power plug in water or any other liquid.
  - Always unplug the appliance from the outlet when not in use and before cleaning.
  - Never unplug the appliance by pulling on the cord.
  - Only use accessories that come with the appliance, as other accessories may cause fire, electric shock, or injury.

## Tower Fan Safety Instructions

- It is recommended to switch off the fan, and allow the motor to rest for at least 1 hour after 15 hours of use.
- For your own safety, please clean your fan regularly. Accumulation of dust/ pet dander etc. may lead to motor failure or pose a fire hazard.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Indoor and household use only.
- When the fan was assembled, the rotor blade guard shall not be taken off anymore.
  - Before cleaning unplug the fan.
  - The rotor guard shall not be disassembled/opened to clean the rotor blades.
  - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.
- Never insert fingers, pencils, or any other object through the grille when the fan is running.
- Disconnect fan when moving from one location to another.
- Be sure the fan is on a stable surface when operating to avoid overturning.
- Do not use the fan near the window, rain may create an electrical hazard.
- Do not use the fan near or in wet or damp locations. Never place the FAN where it may fall into a bathtub or other water container.
- Avoid using extension cord as the extension cord may overheat and cause a risk of fire.

 
## Warning:

- The Main Power Switch and the On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.


## PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	AIR VOLUME	MAX AIR FLOW
MFD4000R	220-240V, 50Hz	45W	25 m <sup>3</sup> /min	180 m/sec


## INTRODUCTION OF PARTS

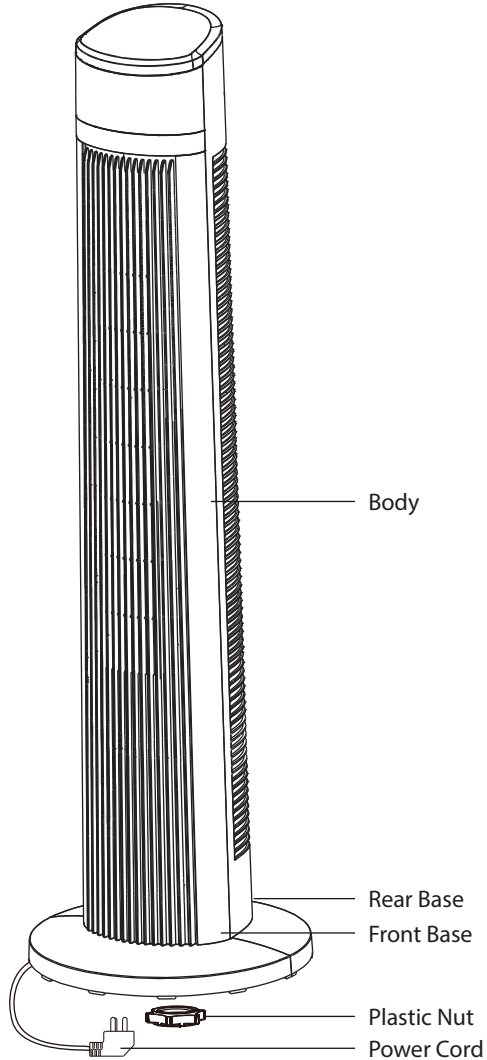

## Control Panel

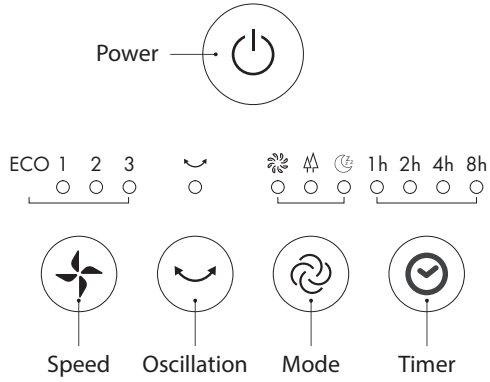 

## Remote Control



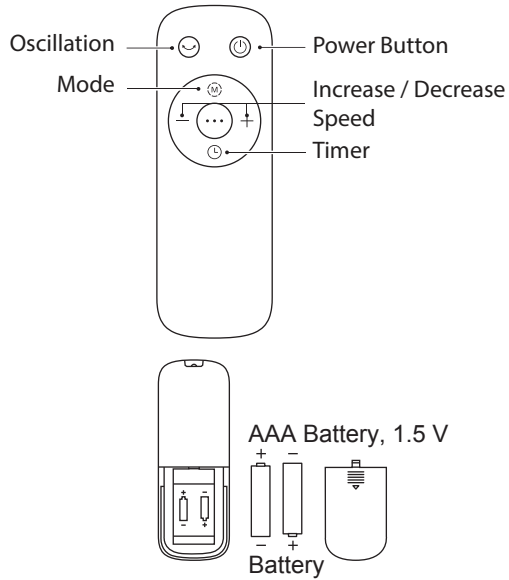 


Use manganese or alkaline batteries of type "AAA".  
Do not use rechargeable batteries.

# CONTROLS AND OPERATIONS
   
## Before use

- Take out the fan body and the spare parts from the box. Put the front base onto the rear base and join them together. (See Fig. 1)
- Unlock the plastic nut from the fan body. (See Fig. 2)
- Pass the power cord through the flute, then insert the fan body into the base. (See Fig. 3)
- Fix the fan body on the base with the plastic nut. (See Fig. 3)

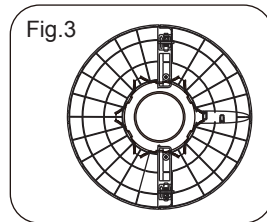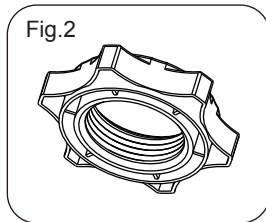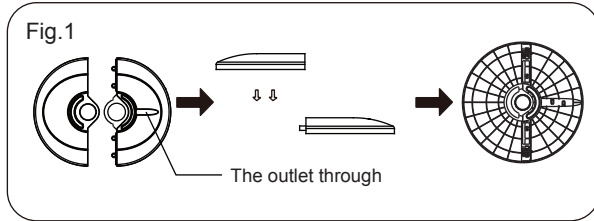

- The battery contains many heavy metals, acids, and bases, etc., which may threaten human health; Waste batteries should be recycled separately.

## Operation



 

### Power:

- Press the power button  to start.


### Speed:

- 3 speeds can be adjusted by pressing the button .


### Mode:

- Press  button to switch between modes. The sequence is Normal , Natural , and Sleep  when this button pressed repeatedly or continuously. The light indicates the mode state.

### Oscillation:

- Press  button to turn on or off the left and right auto-oscillation. The light indicates the mode state.

Timer:

- Press  the button to choose the timer for up to 15 hours to switch off the appliance.

Remote Controller:

 
- The remote control should be used within 5 meters in front of the appliance at around a 30 degree of deviation angle. Point the remote controller at the receptor on the body of the fan and press the desired button.
- The batteries must be removed from the remote controller before it is scrapped and that they are disposed of safely.
- The buttons on the appliance such as the Power, Speed, Mode, Timer, Oscillation have the same functions as the corresponding buttons on the remote controller.

Batteries (battery not included in the packaging)

- Slide the battery compartment cover.
- Insert the batteries, and make sure that the batteries are placed properly.
- Slide back the battery cover.


Notes:

- Use size "AAA" manganese or alkaline batteries.  
Do not use rechargeable batteries.



Battery WARNING as below

 - Do not dispose of batteries in fire, batteries may explode or leak.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

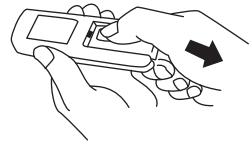

## CLEANING AND MAINTENANCE

The tower fan requires minimal maintenance. Do not try to fix it by yourself.

- Before cleaning and assembling, do not plug the power cord into the socket.
- To ensure that there is adequate air circulation to the motor keep vents at the rear of the motor housing from dust, fluff, etc.
- Do not be used a vacuum cleaner to clean these vents before unplug.
- Do not disassemble the fan to remove fluff.
- Please wipe the exterior parts with a soft cloth which is soaked in mild detergent.
- Do not use any abrasive detergent or solvents to which may scratch the surface.
- Do not use any of followings as cleaning agent: gasoline, thinner, bending.
- Do not allow water or any other liquid into motor housing or interior parts.

### Cleaning

- Be sure to unplug the fan from the electrical supply mains before cleaning.
- Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.