 


mistral

Tower Fan with Remote MFD4880R

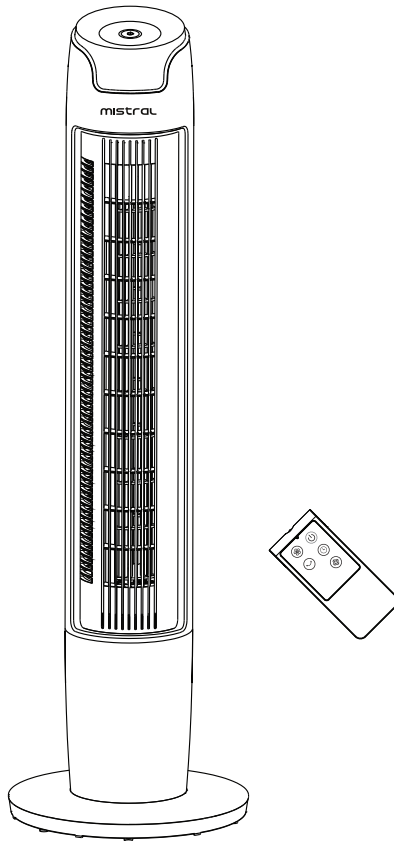

TOWER FAN

Please read this instruction manual thoroughly before operating and keep it for future reference

IMPORTANT SAFETY INSTRUCTIONS

Warning

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capability, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised at all times while in use.
- Children should be supervised to ensure that they do not play with the appliance.
- Remove the packaging and ensure that the appliance is not damaged. In case of doubt, do not use the appliance and contact the manufacturer or product dealer.
- Before connecting this appliance to the power supply, check if the rated voltage indicated on the rating label of this appliance corresponds with the supplied voltage at your home.
- Do not use the appliance if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped or damaged in any way. If the power cord is damaged, it should be replaced by the Service Centre to avoid any hazards.
- Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse the appliance, power cord, or power plug in water or any other liquid.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Never unplug the appliance by pulling on the cord.
- Only use accessories that come with the appliance, as other accessories may cause fire, electric shock, or injury.

Tower Fan Safety Instructions

- It is recommended to switch off the tower fan and allow the motor to rest for at least 1 hour after 10 hours of use.
- For your own safety, please clean your tower fan regularly. Accumulation of dust/ pet dander etc. may lead to motor fire or pose a fire hazard.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- Indoor and household use only.
- When the fan was assembled, the rotor blade guard shall not be taken off anymore.
 - Before cleaning unplug the fan.
 - The rotor guard shall not be disassembled/opened to clean the rotor blades.
 - Wipe the fan enclosure and rotor blade guard with a slightly damp cloth.
- Never insert fingers, pencils, or any other object through the grille when the fan is running.
- Disconnect fan when moving from one location to another.
- Be sure the fan is on a stable surface when operating to avoid overturning.
- Do not use the fan near the window, rain may create an electrical hazard.
- Avoid using extension cord as the extension cord may overheat and cause a risk of fire.

- Do not use the fan near or in wet or damp locations. Never place the FAN where it may fall into a bathtub or other water container.


Warning

- The Main Power Switch and the On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.

PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER
MFD4880R	220-240V~ 50Hz	45W

 
INTRODUCTION OF PARTS

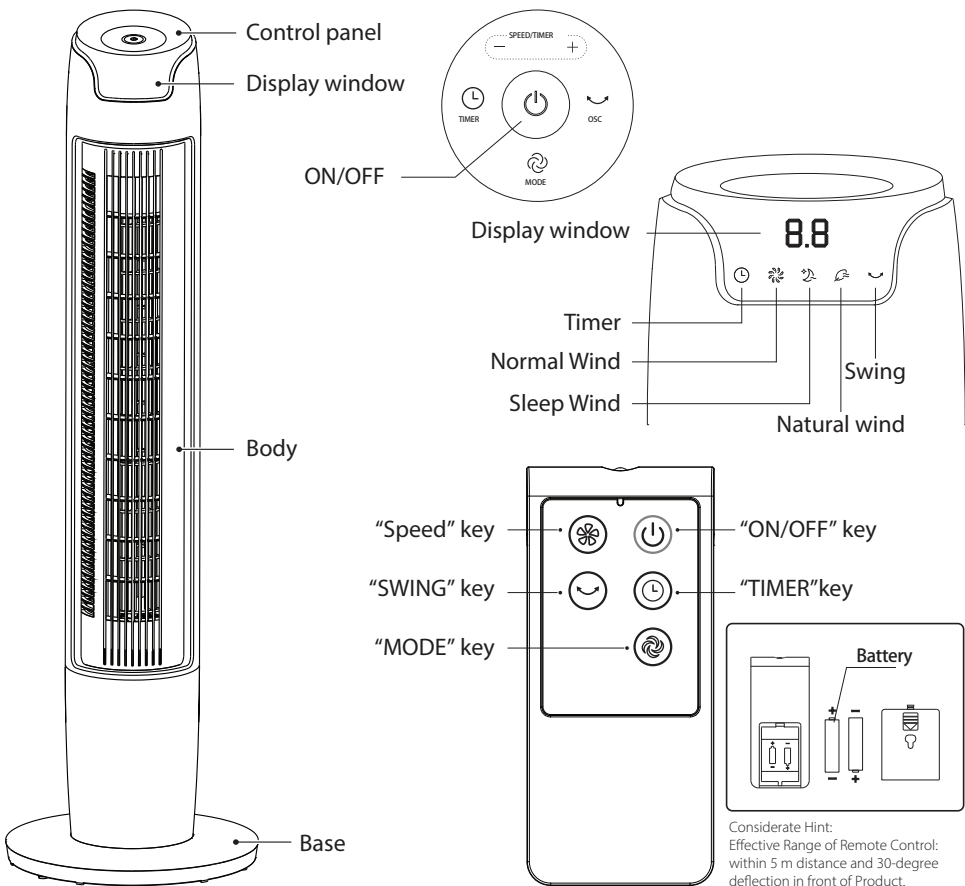


CONTROLS AND OPERATIONS

Before use


 
- Take out the fan body and the spare parts from the box.
- Put the front base onto the rear base and join them together.
- Align the column in middle of pedestal with the hole and revolve for fitting.

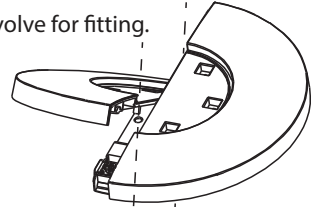

 - Revolve the arrows of two rotary knobs about 90°

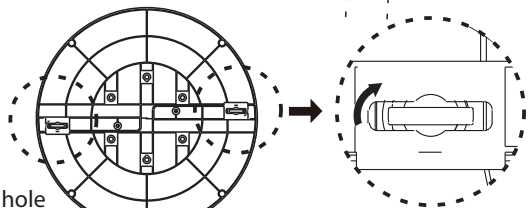


  - Assemble the pedestal and body.
- Align three screws with corresponding hole locations and screw tightly.

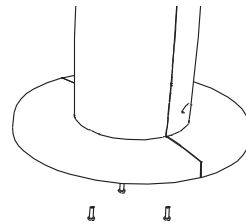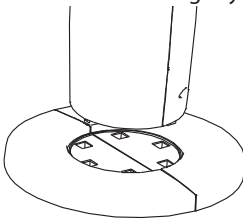


Operation

 Power:

- Press the power button "  " to start.


Speed:

- Press the " + " or " - " button to adjust 6 speeds of air flow.
3 speeds can be adjusted by pressing the button "  ".


Note:

- Sleeping winds and neutral winds function only can adjust 3 speeds of air flow.





Timer:

- Press the "  " button to select the timer.
- Press the " + " or " - " button to adjust the timer.


Note:

- When the fan is on, press the "  " button to time the fan to shut down after 0.5-12 hours.
- In stand-by mode, you can pre-set the fan to start in 0.5-12 hours.

Mode:

- Press the “  ” button to switch between modes.
The sequence is Normal “  ”, Natural “  ”, and Sleep “  ”.

Oscillation:

- Press the “  ” button to toggle the operation between Swing and Fixed Direction.

Remote Controller:

- The remote control should be used within 5 meters in front of the appliance at around a 30 degree of deviation angle. Point the remote controller at the receptor on the body of the fan and press the desired button.
- The batteries must be removed from the remote controller before it is scrapped and that they are disposed of safely.
- The buttons on the appliance such as the Power, Speed, Mode, Timer, Oscillation have the same functions as the corresponding buttons on the remote controller.

CLEANING AND MAINTENANCE

The tower fan requires minimal maintenance. Do not try to fix it by yourself.

- Before cleaning and assembling, do not plug the power cord into the socket.
- To ensure that there is adequate air circulation to the motor keep vents at the rear of the motor housing from dust, fluff, etc.
- Do not be used a vacuum cleaner to clean these vents before unplug.
- Do not disassemble the fan to remove fluff.
- Please wipe the exterior parts with a soft cloth which is soaked in mild detergent.
- Do not use any abrasive detergent or solvents to which may scratch the surface.
- Do not use any of followings as cleaning agent: gasoline, thinner, bending.
- Do not allow water or any other liquid into motor housing or interior parts.

Cleaning

- Be sure to unplug the fan from the electrical supply mains before cleaning.
- Plastic parts should be cleaned with a soft cloth moisten with mild soap. Thoroughly remove soap film with dry cloth.