 


mistral

16" DC Stand Fan with Remote MSF1630DR

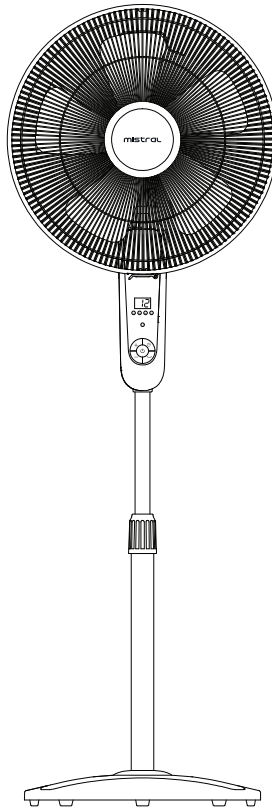

STAND FAN

Please read this instruction manual thoroughly before operating and keep it for future reference

IMPORTANT SAFETY INSTRUCTIONS

Warning

- This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge unless they have been given supervision or instruction by a person responsible for their safety.
- Children should be supervised at all times while in use.
- Do not use the appliance if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped or damaged in any way. If the power cord is damaged, it should be replaced by the Service Centre to avoid any hazards.
- Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse the appliance, power cord, or power plug in water or any other liquid.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Never unplug the appliance by pulling on the cord.
- Only use accessories that come with the appliance, as other accessories may cause fire, electric shock, or injury.


Stand Fan Safety Instructions

- Do not cover the appliance or near flammable or explosive gases to avoid any fire hazard.
- The appliance must stand upright, it should have a distance of 30 cm other objects, or any items would stop the oscillation of the appliance. Make sure there are no curtains, table cloths, clothing, curtains, hair, etc. near the appliance. They could be sucked into the opening of the fan, which can lead to damage or injury.
- Do not insert your fingers, pencils, or any other objects into the appliance.
- Do not use the appliance outdoors, or in any place where it can be splashed with oil, water, or any substances.
- Do not expose the appliance to direct sunlight.
- Do not use the appliance if it seems to be defective, and if the appliance breaks down, switch the appliance off, and do not repair the appliance by yourself, please contact the Service Centre for repairs.
- Do not let the appliance touch any hot surfaces.
- Do not use the fan in high humidity, temperature, or dusty area.
- Do not insert fingers or other objects into the fan during use.
- Avoid blowing the fan at elderly and children for long periods of time.
- Do not spray detergent such as insecticides into the fan to avoid damages to the material.
- Year 1 – 2 of use: It is recommended to switch off the fan and allow the motor to rest for at least 1 hour after 10 hours of use.
- After 2 Years of Use: It is recommended to switch off the fan and allow the motor to rest for at least 1 hour after 3 hours of use.

PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	AIR VOLUME	MAX AIR FLOW
MSF1630DR	220-240V~50-60Hz	30W	47.9 m ³ /min	2.7 m/sec

INTRODUCTION OF PARTS

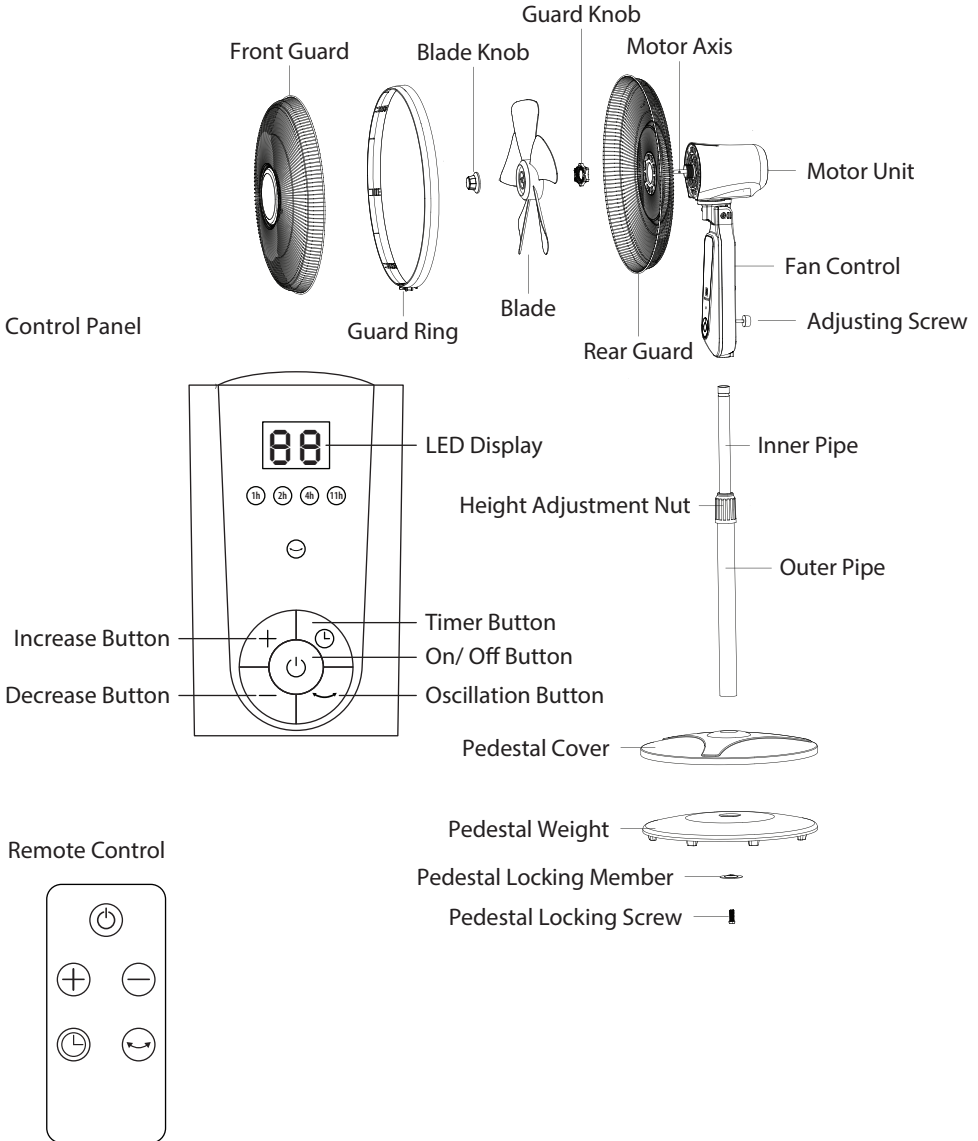

CONTROLS AND OPERATIONS

How to assemble the fan

1. Remove the fan from its package and check its contents against the list provided in the table above.
2. Attach the pedestal cover and weight to the outer pipe first to correctly mount the fan.
3. Securely screw the outer pipe to the pedestal from the bottom using the attachment.
4. Connect the motor unit to the inner pipe by inserting it into the guide of the fan control and fixing it with the adjusting screw.
5. Place the rear protective cage on the fan unit with the handle facing up.
6. Tighten the rear protective cage firmly using the locking nut.
7. Insert the rotor blade onto the motor shaft and fasten it with the appropriate mounting screw, ensuring that all components are correctly positioned to prevent vibrations.
8. Attach the protection cage ring to the front protective cage and join it to the rear protection cage.
9. Secure the protective cage lock located at the bottom of the two cages with the protective cage locking screw.

Control Panel

Power

- On/ Off button to power on and off the fan.

Oscillation

- Press the "Oscillation" button on the control unit or on the remote control to turn on the oscillation.
- By tipping the protective cage, you can change the angle of inclination according to your needs by up to 35° .

Timer

- The fan has maximum 18 hours timer levels that can be set up by the combination of "1/2/4/11". The setting is in 1 hour step (Note: 8, 9, 10 hours are not available). For this purpose, press the "Timer" button on the remote control or the operating panel of the fan.
- The remaining time is indicated by the LEDs on the timer display. To increase the duration of the timer, press the button again.

Example: If you want to set a timer for 7 hours, press the "Timer" button till the LEDs "1" "2" and "4" start glowing. Added together, these indicate the remaining time of the timer.

Speed

- The fan has 24 different speed levels, which you can change using the "Speed level" buttons on the control unit or on the remote control.

Lights

Off

1. Press and hold the Power button for 5 seconds to turn off the LED screen and light.
- The light off function doesn't affect the setting of the fan.

Wake up light

1. After light off, you can press any button to wake up light and then press the button you need to set operations.
2. After 2 minutes without operation, the LED screen and light will automatically go off.

Buzzer

Cancel


- Press and hold the Timer button for 5 seconds, you will hear a sound of "bee", the buzzer sound is cancelled.

Resume

- Press and hold again for 5 seconds again, you will hear a sound of "bee", the buzzer sound is back.

Height adjustment

- To adjust the height of the fan, first loosen the height adjustment nut. You can then adjust the height of the fan by holding the fan control and slightly pushing the fan upwards.
- Once the desired height is reached, tighten the height adjustment nut again.

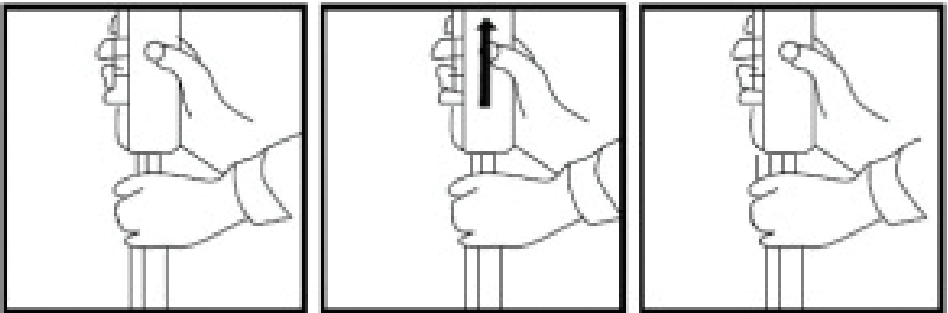

CLEANING AND MAINTENANCE

- Always unplug the fan from the electrical supply source before cleaning.
- Use a soft cloth moistened with mild soap to clean plastic parts.
- After cleaning, thoroughly remove soap film with a dry cloth.

Maintenance

- The fan requires minimal maintenance. Do not attempt to repair it yourself. If service is needed, refer to qualified service personnel.
- Before cleaning and reassembling, do not plug the pins into the socket.
- To ensure adequate air circulation to the motor, keep the vents at the rear of the motor housing free from dust and debris.
- Wipe the exterior parts of the fan with a soft cloth dampened with mild detergent.
- Avoid using abrasive detergents or solvents that may scratch the surface.
- Do not use gasoline, thinner, or benzene as cleaners.
- Avoid exposing the motor housing or interior parts to water or any other liquids.