


mistral

Handheld Portable Vacuum Cleaner MVC901

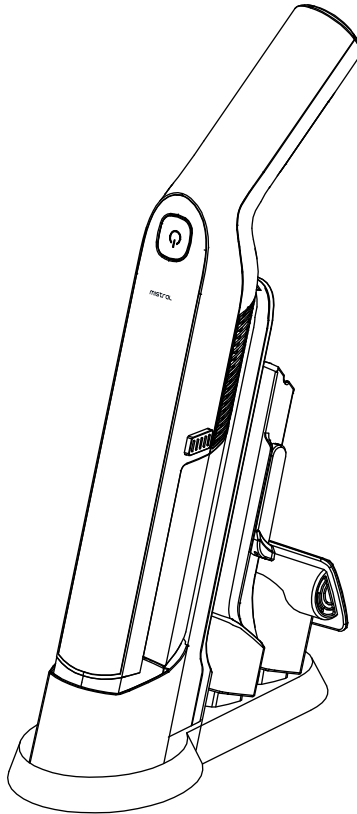

VACUUM CLEANER WITH AC ADAPTER

Please read this instruction manual thoroughly before operating and keep it for future reference

IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by individuals with reduced physical, sensory, or mental capabilities, or those who lack experience and knowledge, unless they have been given supervision or instruction by a person responsible for their safety. Children should be supervised at all times while in use.
- Do not use the appliance if the cord or plug is damaged, if the appliance has malfunctioned, or if it has been dropped or damaged in any way. If the power cord is damaged, it should be replaced by the Service Centre to avoid any hazards.
- Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse the appliance, power cord, or power plug in water or any other liquid.
- Always unplug the appliance from the outlet when not in use and before cleaning.
- Never unplug the appliance by pulling on the cord.
- Only use accessories that come with the appliance, as other accessories may cause fire, electric shock, or injury.

Vacuum Safety Instructions

- Never suck up flammable substances or corrosive liquids and do not suck up ashes until they are cold.
- Never immerse the vacuum cleaner or the adaptor in water.
- Do not use the appliance if the plug, the mains cord or other parts are damaged.
- The adaptor and the charge of this appliance can not be replaced. If the adaptor or charger is damaged, the appliance must be discarded.
- Remove the adaptor from the wall socket before you clean the charger.
- Only charge the vacuum cleaner with the adaptor supplied. During charging, the adaptor feels warm to the touch. This is normal.
- Never block the exhaust air openings during vacuuming.
- Switch off the appliance when you recharge it.
- Always use the vacuum cleaner with the filter unit assembled.
- Charge, store and use the appliance at a temperature between 5 °C and 35 °C.
- Do not dismantle or short-circuit the batteries. Protect the batteries from fire, heat and direct sunlight.
- This appliance is only to be used with power supply unit provided with the appliance.


THIS MACHINE IS INTENDED FOR HOUSEHOLD USE ONLY

1. Do not use near open flames.
2. Do not store near heat sources.
3. Do not pick up water or liquids.
4. Do not pick up burning objects.

PRODUCT TECHNICAL PARAMETERS

MODEL	VOLTAGE INPUT	BATTERY CAPACITY	NOISE	CHARGING TIME
MVC901	11.1V	2000 mAh	75 dB	5.5H
MODEL	VOLTAGE INPUT	MAX & OUTPUT	RATED POWER	
AC Adapter	100-240VAC 50~60Hz	14.0VDC 0.5A 7.0W	16W	

INTRODUCTION OF PARTS

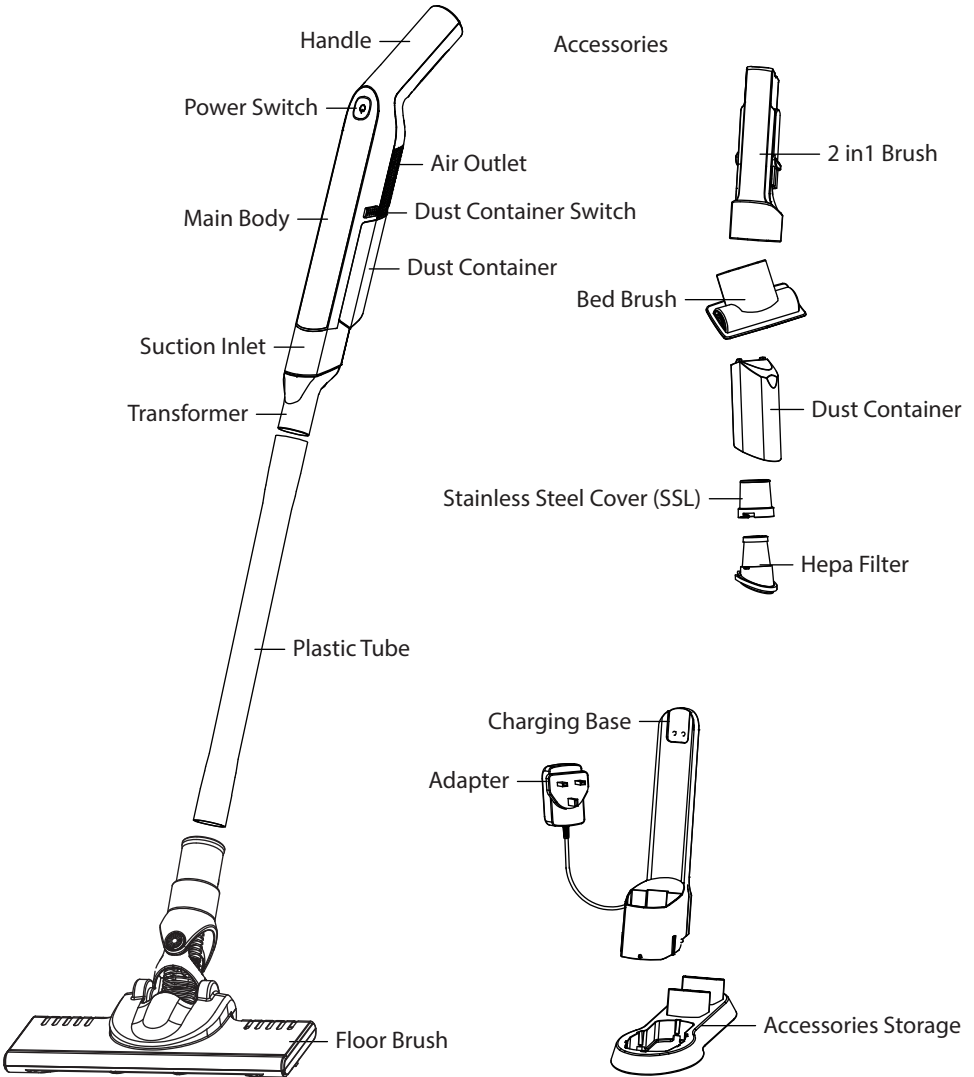

CONTROLS AND OPERATIONS

Charging the vacuum cleaner


1. Install the appliance to the charging base.
2. Connect AC power supply.
3. Make sure to charge it until the appliance is full in power when you first use or when you haven't used it for a long time.

For regular charging, please refer to the indicator light (Fig.2):


1. When you using the appliance,if the the indicator light is twinkle quickly in blue color, it means the appliance need to be charged.
2. When you charge the appliance,if the indicator light is twinkle slowly in blue color(like breathing) ,it is on charging;
- If the light stay on blue, it means the appliance is fully charged,please unplug the adaptor.

Note

- The appliance can not be used during charging.

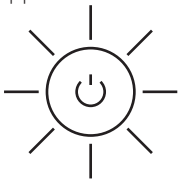

The light twinkle quickly when power is out.

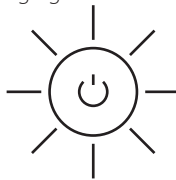

The light twinkle slowly when its charging.



The light stays on when fully charged.

Fig. 2

How to use the vacuum cleaner

1. Press the power switch one time on to use low speed level, press again for high speed level.
2. Press the third time to switch off the appliance.

The appliance comes with the following accessories. Using the accessories properly.

- 2 in 1 brush: Vacuum corners or narrow gaps and to clean delicate surfaces. (See Fig 3 & 4)
- Bed brush: to clean bed surfaces (See Fig5)
- Plastic tube and flexible floor brush: to cleaner the floor or under the bed, cupboard, etc. (See Fig.6)

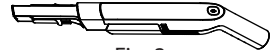 


Fig. 3



Fig. 4

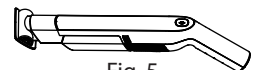


Fig. 5

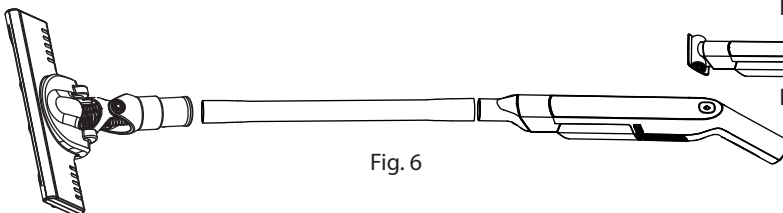


Fig. 6

CLEANING AND MAINTENANCE

1. Press the dust container switch to take off the dust container from the main body. (see Fig. 7)

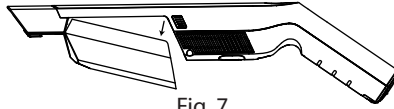


Fig. 7

2. Take out the filter set from the dust container, turn the container upside down and dump the dust out. (see Fig. 8 & 9)

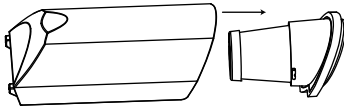


Fig. 8

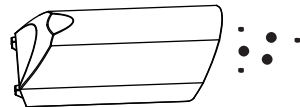


Fig. 9

3. Rotate the Hepa filter right clockwise separate it from stainless steel cover. (see Fig. 10)

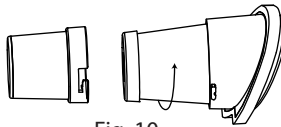


Fig. 10

4. Clean the SSL and Hepa filter under water or with a soft brush (not included). (see Fig. 11)

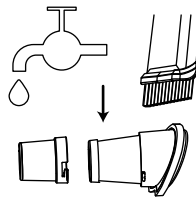


Fig. 11

5. Make sure to dry the SSL and Hepa filter thoroughly before further use.
6. Clean the dust container under water or with a damp cloth. Make sure to dry the dust container thoroughly before further use. (see Fig. 12).

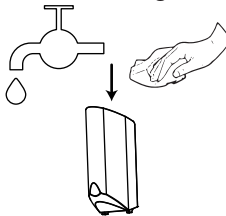


Fig. 12

7. Reassemble the device.
8. Store in a secure and dry, frost free place out of the reach of children.
9. Do not place other objects on the product.

TROUBLESHOOTING

Problem	Cause of Issue	Solution
The appliance doesn't work.	The batteries may be low.	Recharge the batteries.
	The appliance may have been switched on while it was on the charger.	Make sure the appliance is switched off when you charge it.
The charging light does not go on	The adaptor is not plugged into the power socket properly.	Make sure that the adaptor is inserted properly in the wall socket and that the appliance is switched off.
The vacuum cleaner does not vacuum properly	Dust container is not assembled properly to the main unit.	Check and reassemble if needed.
	Dust container may be full.	Empty it.
	Filter may be clogged.	Clean the filter.
The vacuum cleaner does not work properly when on of the accessories is attached to the nozzle.	The dust container may be full.	Empty the dust container.
	The accessory may be clogged.	Remove the obstruction from the accessory.
	The HEPA may be clogged.	Clean it.