




Personal Blender MMPB601

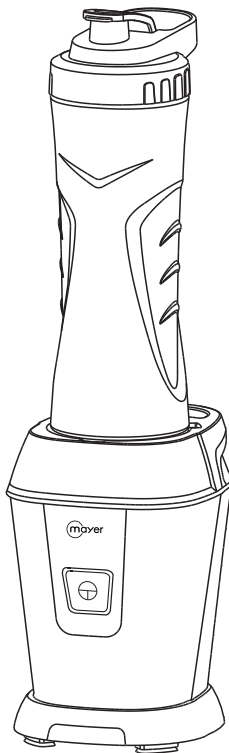

BLENDER

Please read this instruction manual thoroughly before operating and keep it for future reference


IMPORTANT SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been dropped or damaged in any manner. If the power cord is damaged, it must be replaced by the Service Centre to avoid a hazard.
- When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury.
- Do not immerse appliance, cord or plug in water or other liquid.
- Unplug from the outlet when not in use and before cleaning.
- Do not unplug the appliance by pulling on the cord.
- Use the accessories from the appliance only, as other accessories not from the appliance may cause fire, electric shock or injury.
- Do not let the cord hang over the edge of the table or counter or touch hot surfaces.
- Never leave the appliance unattended when in use.
- Avoid contact with moving parts. Keep hands and utensils out of the sports bottle while blending to prevent personal injury or damage to the blender.
- The blade is sharp. Handle with care.
- To reduce the risk of injury, never place cutter-assembly blades on the base without the sports bottle properly attached.
- Do not attempt to bypass the interlock safety switch system that powers the appliance.
- Maximum temperature of which is 60°C.
- When handling hot liquids, use extra caution, because they may release steam or may splash and scald the user. Before pouring hot liquids into the blending container and blending them, it is suggested that let them cool to at least 40°C.
- Do not use at outdoors or for commercial purposes, this appliance is for household use only.
- Always operate on a flat and sturdy surface.
- Unplug the blender when not in use, before taking off or putting on parts and before cleaning.
- In case of damage and deformation of the parts. Do not use hot water and disinfect cabinets that temperatures exceed 60°C to wash or sterilize them.
- Use this appliance for its intended use as described in this manual. The use of attachments not made by the manufacturer, including canning or ordinary jar and processing assembly parts, is not recommended as it may cause a risk to persons.

PRODUCT TECHNICAL PARAMETERS

MODEL	RATED VOLTAGE	RATED POWER	GROSS CAPACITY
MMPB601	220-240V~, 50-60Hz	300W	600ml

INTRODUCTION OF PARTS




Spill-Proof Drinking Lid



600ml Blending Bottle



Blade Assembly

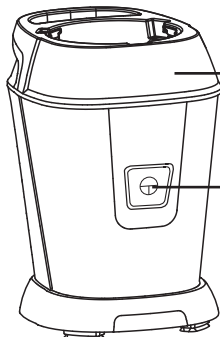

Blender Base

Pulse Button

CONTROLS AND OPERATIONS

Before first use

- Before using the appliance for the first time, wash all of the accessories in warm, soapy water, then rinse and dry thoroughly. Wipe the appliance base unit with a soft, damp cloth and allow to dry thoroughly.
- Do not immerse the appliance base unit in water or any other liquid.

Note: When using the appliance for the first time, a slight odour may be emitted. This is normal and will soon subside. Ensure that there is sufficient ventilation around the appliance.

Using the appliance

1. Place the blending bottle on a flat surface with the open end facing up.
2. Fill the blending bottle with favourite ingredients.
3. Be sure not to fill the ingredients exceed the 600ml marking on the bottle.

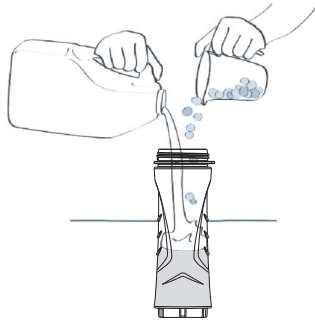


fig.1

4. Fasten the blade assembly on the open end of the bottle. Ensure that it is tightly sealed and secure.

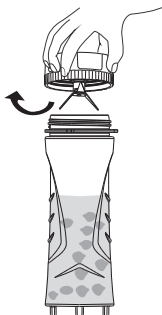


fig.2

- Turn the bottle upside down and place it onto the blender base, align the protruding parts (3 micro switch block) in right position on the bottle with the blender base, and lock it by turning the blending bottle in clockwise direction in the base.




fig.3

- Plug in and switch on the appliance at the main power supply.
- To pulse blend the ingredients, press a short while and release the pulse button. It is recommended that pulse blend for 2 or 3 times to mix and break down the ingredients well blending continuously.
- For a continuous blend, press and hold the pulse button. Do not blend for long periods of time. Maximum operation time is 60 seconds, allow the appliance to cool for 2 minutes before using it again.



fig.4



fig.5

- After the blending is finished, unplug the power cable. Make sure the blade unit has stopped turning and remove the bottle from the blender base.



fig.6

10. Turn the bottle over and place on a flat surface.
11. Replace the blade assembly with the spill-proof drinking lid. Take the bottle with you throughout the day to stay hydrated.



fig.7



fig.8

Recommended operating guide & blending tips

- Ensure that the lid is securely fitted before use.
- Put liquid ingredients in the blender bottle first, followed by solid ingredients, unless a recipe says otherwise.
- Cut all harder textured fruits and vegetables into pieces no larger than 10x10x10mm.
- For optimal performance, place desired ingredients in the blending bottle in accordance from liquids, followed by softer textured foods, then to harder textured foods.
For Example: liquids -> fresh ingredients -> frozen fruits -> yoghurt -> ice cream.
- The recommended usage ratio is to fill 2/5 of the capacity with ingredients and 3/5 with liquid.
- Do not blend warm or hot liquid or food, as this may cause a pressure build-up, which could cause serious injury.
- To prevent the appliance from overheating, do not blend ingredients for more than 30 seconds at a time.
- Do not blend for long period of time. Maximum operation time is 60 seconds, allow the appliance to cool for 2 minutes before using it again.
- If the blades are not running smoothly, stop the appliance and carefully remove the blade assembly. Add a small amount of cold liquid or reduce the quantity of the ingredients in the blending bottle.
- Do not overload the blender bottle should not be more than the 600ml indicator line. If the motor stalls, turn the blender off immediately, unplug the appliance and let it cool for at least 15 minutes. Then, remove a portion of the ingredients and continue using the blender again.
- This blender cannot be used for mashing potatoes, whipping egg whites or substitute any dairy toppings, mixing stiff dough or grind raw meat.
- Do not operate the appliance if the blending bottle is cracked, broken or empty.
- Do not add ingredients or liquids into the blending bottle that are over 60°C.

CLEANING AND MAINTENANCE

- Unplug the blender from the power socket before cleaning.
- Clean the parts immediately after use, especially the parts that are in contact with food.
- Do not wash or immerse the motor base into the water. Only wipe it with a soft damp cloth.
- Do not wash the appliance in the dishwasher.

Cleaning the blender bottle

- Unplug out and remove the blender bottle that is needed to be clean and use a mild detergent to clean.
- Rinse the blender bottle under running water.
- Pour warm water and mild detergent into the blender bottle, be sure to not exceed the maximum capacity.
- Place the blade assembly onto the blender bottle.
- Turn on the blender and let the water and soap blend for a few seconds before running the blender bottle underwater to wash.
- Repeat the above steps until all the detergent has been washed off.

Note:

- Do not wash with boiling water.
- Do not disinfect with a disinfecting product.
- Be careful of the sharp blade when cleaning.